

MITEL NETWORKS

5201 | IP Phone



Telephone Status Indicators

Situation:	The light indicator (LED) is:
When line is idle	Off
When line is ringing	Flashing rapidly
Message(s) waiting/ Voicemail	Flashing slowly

Placing and Retrieving a Call on Hold

To place a call on Hold:

- 4 Press **Hold** and
- 1 replace the handset.

To retrieve the call:

- 1 Lift the handset and
- 4 press **Hold**.

Receiving a Call

- 1 Lift the handset.

Making a Call

- 1 Lift the handset.
- 5 Dial the number.

Adjusting Volume Levels

Ringer Control

To adjust the Ringer Volume while the phone is ringing:

- 6 Press to increase the volume.
- 6 Press to decrease the volume.

Handset Receiver Volume Control

To adjust the Handset Receiver Volume when you are using the handset:

- 6 Press to increase the volume.
- 6 Press to decrease the volume.

Redialing the Last Number You Called

- 1 Lift the handset.
- 4 Press **Redial** twice.

Responding to a Message

- 3 If your Message Indicator is flashing,

- 1 Lift the handset.
- 4 Press **Message**.

Your voicemail system or the last person to call you (who left the message) is automatically called.



it's about **YOU**

M Mitel (design) is a registered trademark of Mitel Networks Corporation. © 2003, Mitel Networks Corporation. All other products and services are the trademarks of their respective holders. All rights reserved.

...getting more information

For more features and detailed user instructions refer to the Extension User Guide on the CD-ROM supplied with your system.

Contact your Administrator for details on how to access this document.