


MITEL

5602 Wireless Handset

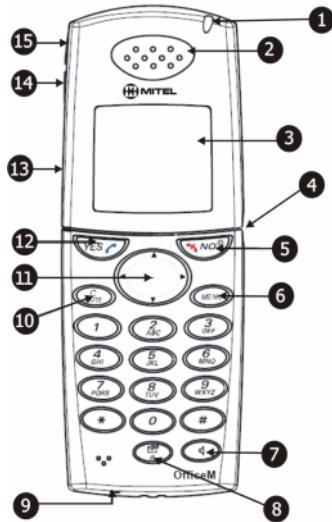

- 1 LED
- 2 Earpiece
- 3 Display
- 4 Headset Connector
- 5 On/Off, On hook, and No button
- 6 Menu Key
- 7 Handsfree Key
- 8 R/ Message Key
- 9 Microphone
- 10 Mute/ C Key
- 11 Navigation Key
- 12 Off hook and Yes button
- 13 Loudspeaker (on back of handset)
- 14 Volume Down
- 15 Volume Up

Display Icons

- | | |
|------------------------------|-------------------|
| Signal Strength Indicator | Voice mail |
| Battery Icon (fully charged) | Locked keypad |
| Battery Icon (discharged) | Headset connected |
| Ring signal muted | Microphone muted |
| Loudspeaker on | Missed call |
| New message | Answered call |
| Confirm message | Outgoing call |
| Read message | |



Turning the Handset On/Off

- Press and hold the **No** button until the display lights up/turns blank.

Making a Call

Dial the number and press **Yes**. The name of the called party is displayed if available.

OR

Press **Yes** to open the call list and use the Navigation key to scroll the list of your last twenty calls. Press **Yes** to dial.

OR

1. In the menu, select **Phonebook**.

2. Select **Call**, and then press **Yes**.

3. At the **Find** prompt, enter the first few characters of the name of the person you want to call.

4. Press **Yes** to dial.

Answering a Call

- Press **Yes** to answer a call in normal mode.

OR

- Press the Handsfree key to answer in speaker mode.

Ending a Call

- Press **No** to end a call.

Placing a call on Hold

- Press the **R** key to place a call on Hold. After 30 seconds, "Hung Up" is displayed and a busy tone sounds.
- Press **R** key again to retrieve the call.

Transferring a Call

- Press the **R** key to put the call on hold.
- Dial the number to which you want to transfer the call.
- Press **No** to transfer the call.

Note: Supervised transfer feature is system-dependent. See your administrator.

Adjusting Volume Levels

To adjust earpiece volume during a call:

- Press upper and lower volume buttons to increase/decrease volume

To change ringer volume:

- In the menu, select **Toolbox**.
- Select **Sound & Alerts**.
- Select **Ringer Volume**.
- Select Voice, Mail, or Alarm Clock
- Use the navigation key arrows to adjust selected volume.

To turn Loudspeaker on/off:

- Press the **Handsfree** key before or during a call.

To turn Mute on/off during a call:

- Press the **Mute** key.

To turn ring signal on/off in standby mode:

- Press the **Mute** key and then the **Yes** button to toggle ring signal on/off. (The Ring signal muted icon appears.)

Locking the keypad:


- In the menu, select **Toolbox**.
- Select **Locks**.
- Select **Key Lock**.
- Set to **Automatic** to enable keypad lock.

Charging the battery:

Place the telephone in the desktop charger. The Battery icon indicates charge level. The phone is fully functional while in the charger.


Menu Navigation

On hook/ Standby Menu

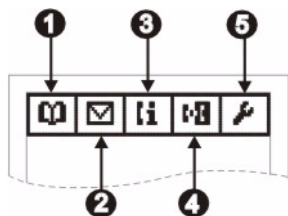

- 1 Phonebook
- 2 Message
- 3 Call Info
- 4 Call Service
- 5 Toolbar

Navigating the Menu

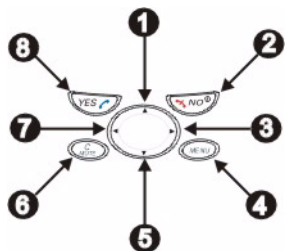

- 1 Up
- 2 No
- 3 Right
- 4 Menu
- 5 Down
- 6 Clear
- 7 Left
- 8 Yes

Enter the menu by pressing the **Menu** key, or the Left/Right navigation keys. Use the Left/Right navigation keys to choose a tab, and then press **Yes** to open it. Use the Up/Down navigation keys to scroll through menu choices. Press the **Yes** key to make a selection or press the **No** key to back up one step. Confirm your settings by pressing the **Yes** key. Return to standby mode by pressing the **Menu** key or by pressing the **No** key for three seconds.

Menu Structure

On hook/Standby Menu



Phonebook	Call
	Add contact
	Edit contact
	Delete contact
	Open central
Message	Voice
	Inbox
	Send
Call info	Missed Calls
	Call list
	Call time
Call service	Absence
	Divert
Toolbox	Alarm Clock
	Calculator
	Sound & Alerts
	Display
	Network
	Time & Date
	Locks
	Answering mode
	Language
	In charger mode
	Master reset

Note: Menu options are dependent upon system programming.

