


MITEL

5606 Wireless Handset

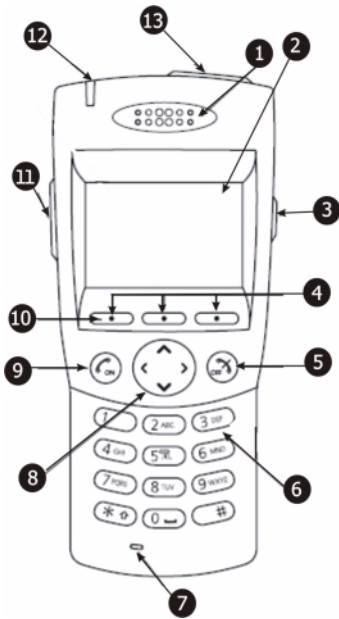

- 1 Loudspeaker
- 2 Display
- 3 Mute Button
- 4 Soft Keys
- 5 OFF Button
- 6 Alphanumeric Keys
- 7 Microphone
- 8 Navigation Key
- 9 ON Button
- 10 Menu Soft key
- 11 Volume Up/Down Button
- 12 LED
- 13 Alarm Button (optional)

Display Icons

	Off hook (call in progress)		Digit input mode
	Audio signals off		Phonebook
	Battery		Locked keypad
	Loudspeaker on/off		Unanswered call
	Headset connected		Incoming/Outgoing call
	New message		Unread/Read message
	Text input mode (capitals)		No movement/Man-down alarm
	Text input mode (lower case)		



Turning the Handset On/Off

To turn on:

1. Press and hold the **ON** button. "Switch on?" is displayed.
2. Press **Yes** within 10 seconds.

To turn off:

1. Press and hold the **OFF** button.
2. Select **Yes** and press **OK**.

Making a Call

- Dial the number and then press the **ON** button. The name of the called party is displayed if available.

OR

- Press the **Navigation Key** down arrow to open the call list and use the **Navigation key** to scroll the list of your last twenty calls. Press the **ON** button to dial.

OR

1. In the **Contacts** menu, select **Central Phonebook** and then press the **Right navigation key**.
2. Select the name to call from the list and then press the **ON** button.

OR

- Press a pre-programmed hot key. For information about programming Hot keys, see the *Mitel 5606 Wireless Handset User Guide*.

Answering a Call

- Press the **ON** button or the **Accept** softkey to answer a call in normal mode.

OR

- Press the **Volume Up** button or the middle softkey to answer in speaker mode.

Ending a Call

- Press the **OFF** button to end a call.

Placing a call on Hold

- Press the **R** softkey to place a call on Hold. After 30 seconds, "Hung Up" is displayed and a busy tone sounds.
- Press the **R** softkey again to retrieve the call.

Transferring a Call

1. Press the **R** softkey to put the call on hold.
2. Dial the number to which you want to transfer the call.
3. Press the **On** button to transfer the call.

Note: Supervised transfer feature is system-dependent.

Adjusting Volume Levels

To adjust earpiece volume

- Press **Volume Up/Down** button to increase/decrease volume during a call.

To change ringer volume:

- In the **Settings** menu, highlight **Alert Signals**.
- Select **Ring Signals** and press **>**.
- Select a call type and a volume level.
- Press **Select** to activate your choice.

To turn Loudspeaker on/off:

- Press the middle softkey before or during a call.

To turn Mute on/off during a call:

- Press the **Mute** button. "Muted" is displayed.

To turn ring signal on/off in standby mode:

- Long press the **Mute** button to toggle ring signal on/off. The "Audio Signals Off" icon appears.


Locking the keypad:

- Press the * key and then within four seconds, press the left softkey to lock/unlock keypad. The locked keypad icon indicates a locked keypad.

Charging the battery:

Place the handset in the desktop charger. The Battery icon indicates charge level. The handset is fully functional while in the charger.

Navigating the Menu

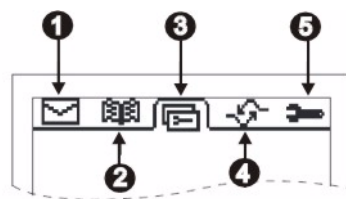

1. Message
2. Contacts
3. Modes
4. Services
5. Settings

To perform this task...

- | | |
|---------------------|----------------------------|
| Enter the menu | Press this key |
| Choose a menu tab | Menu softkey |
| Open a menu tab | Left/Right navigation keys |
| Move through a list | Right navigation key |
| Expand a selection | Up/Down navigation key |
| Select an item | Right navigation key |
| Exit a menu | Press the ON button |
| | Press the OFF button |

Menu Structure

On hook/Standby Menu



Messages	Message List
	Send SMS
Contacts	Local Phonebook
	Central Phonebook
	Call List
Modes	Normal
	In Charger
	Modes 2 - 9
	Switch Off
Services	Services 1 -10
Settings	Alert Signals
	Alarm Settings
	Soft key
	Hot key
	General
	System

Note: Menu items are dependent upon system programming.

