MITEL 5340e IP PHONE



Display

Ring/Message Indicator

8 Volume, Speaker/Mute Controls

4 Fixed Function Keys

6 Keypad

6 Page Navigation Keys

7 Programmable Feature Keys and Softkeys

8 Speaker

Handset



Speaker



Mute Menu



Cancel



Redial



Hold



Transfer/Conference



Message

NOTE: For more information about other features and applications, refer to 5330e/5340e IP Phone User Guide located at www.mitel.com, or contact your Administrator.

Make a Call

② Lift the handset OR

3 Press (1)

5 Dial the number OR

Press a Speed Call key OR

4 Press 123 OR

5 Dial the prefix for external calls (e.g. 9) and the

Answer a Call

Lift the handset OR

3 Press (1), and begin speaking.

End a Call

4 Press X OR

Page 1 Replace the handset.

Place a Call on Hold

◆ Press △ . The line key flashes.

Replace the handset if necessary.

Retrieve a Call from Hold

Lift the handset OR

3 Press (1).

Press the flashing line key.

Retrieve a Message

4 Press It flashes when a message is

Follow the voice mail prompts to retrieve your message.

Transfer a Call

4 Press A St.

5 Dial the number. Wait for an answer.

 Hang up OR wait for the called party to answer, announce the transfer, and then hang

Conference a Call

4 Press $\sim \mathfrak{M}$.

5 Dial the number of the next party. Wait for an answer.

4 Press $\sim \mathfrak{M}$.

Program a Speed Call

4 Press Menu OR

Press Settings.

Press Programmable Keys.

Press the key you wish to program.

Press Speed Call.

Press Edit Info and enter the label for the Speed Call.

Press Save.

Press Edit Number and enter the phone

number for the Speed Call.

Press Save, and then press Save again.

Press Close and then press Close again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

3 Press repeatedly to raise the volume OR

repeatedly to lower the volume.

3 Press to mute your microphone.

