

Competitive TUI Quick Reference Guide

MITEL

NuPoint Messenger IP

ACCESSING YOUR MAILBOX FROM OUTSIDE THE COMPANY

- Enter the NuPoint Messenger™ system access number.
- Enter your mailbox number followed by the * key.
- Enter your passcode.

You're now at the main menu (shown below) and are ready to begin messaging!

MAIN MENU



PLAY MESSAGE


WHILE PLAYING:




AFTER PLAYING:



MAKE MESSAGE

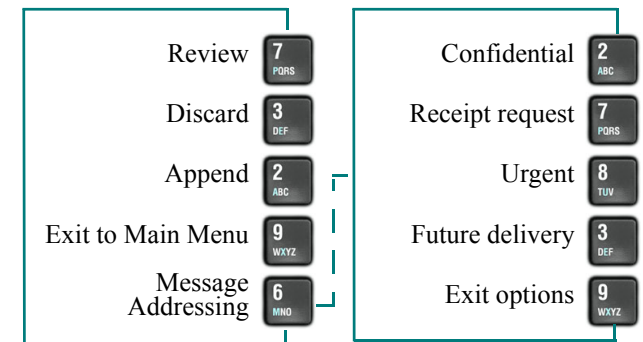

USER OPTIONS

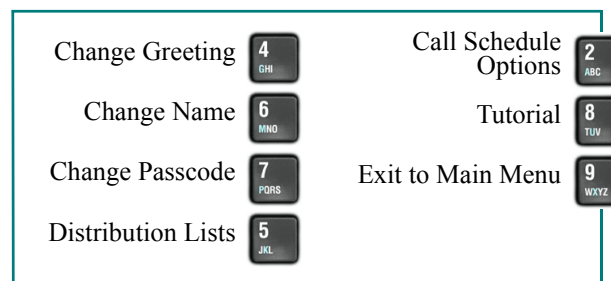

0 0 Transfer to Operator

Exit
Transfer to an extension