

# Telephone Self-Test Pocket Guide



Fifth Edition  
2194-005

**Pointspan**

**A/STRA**






## Revision History

The following represents the revision history of this document:

<b>Revision Number</b>	<b>Date Completed</b>	<b>Point of Contact</b>	<b>Description</b>
005	05.24.2005	B. Marsh	Re-branded for Aastra
004	04.21.2003	EADS TELECOM North America - Technical Publications	Rebranded to EADS TELECOM publication. Changes to the obsolete TELARI references.
003	08.19.1997	Intecom Technical Publications	Update for TELARI and new functionality within the Intecom E.
002	10.14.1996	Intecom Technical Publications	Update to describe functionality in the new release of the Intecom E.
001	10.27.1993	Intecom Technical Publications	Initial release of this publication.

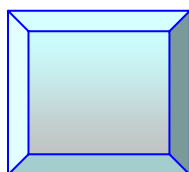

## Telephone Self Test Pocket Guide

---

Name of Test	Application	Action	Response
Class of Service	ALL	Press # * 110	Hear Class of Service Number
Button Template	ATDC, ITE	Press # * 111	Hear Button Template Number
Button Lamps	ATDC, ITE	Press # * 112	All Lamps Off
		Press Each Button 5 Times	<b>Yellow Lamp</b> <b>Red Lamp</b> <b>(ITE Only)</b>
		1st Time	On                      On
		2nd Time	On                      Blinks Slow
		3rd Time	On                      Blinks Fast
		4th Time	On                      Flutters
		5th Time	On                      On
		Press keypads 1 thru 0, *, #	Hear Zip Tone
		Press any keypad except 1	Hear Reorder Tone
		Go on/off-hook (ATDC remove & insert headset)	Telephone Rings/Ringing Stops
	ATDC II	Press On/Off	Telephone Rings/Ringing Stops
Directory Number	ALL	Press # * 113	Hear Directory Number
Port Number	IBX	Press # * 114	Hear Port Number
Timeslot Number	E/PointSpan	Press # * 114	Hear Timeslot Number
Terminal Type	ALL	Press # * 115	Hear Inside Terminal Type, Outside Terminal Type, & Current Terminal Type
User Group	ALL	Press # * 116	Hear User Group Number
Data Directory Number	ALL (with Data Line Assigned)	Press # * 117	Hear Data Directory Number
† All tests begin from dial tone. On STEs, go off-hook; on ITEs with PL preselect, go off-hook; on ITEs without PL preselect, press line select button; on ATDC, press any LOOP key.			

<b>Name of Test</b>	<b>Application</b>	<b>Action</b>	<b>Response</b>
Trunk Port Number	ALL	During Trunk Call Press XFER, # * 118	Hear Trunk Port Number
IBX FLEX IM Location	ALL	Press # * 119	Hear FLEX IM #/Slot/Offset
PointSpan/E Location	ALL	Press # * 119	Hear Cabinet/Shelf/Slot/Circuit
DTMF Ports	From STE Only	Press # * 5	Hear Port Number of a DTMF Generator Port
		Press In Order 1 thru 0, #, *	Hear DTMF Tones (anything other than DTMF indicates the port is bad)
Tone Generator/VRU	ALL	Press # * 2	Hear Zip Tone
		Press 00	Hear Silence
		Press 01	Hear Inside Dial Tone
		Press 02	Hear Outside Dial Tone
		Press 03	Hear Modem Answer Tone
		Press 04	Hear Milliwatt Tone
		Press 05	Hear Busy Tone
		Press 06	Hear Reorder Tone
		Press 07	Hear Ringback Tone
		Press 08	Hear Call Wait Ringback Tone
		Press 09	Hear Zip Tone
		Press 10	Hear Zip Zip Tone
		Press 11	Hear Inside Call Wait Tone
		Press 12	Hear Outside Call Wait Tone
		Press 13	Hear Override Warning Tone
		Press 14	Hear "HELD"
		Press 15	Hear "ENTER"
		Press 16	Hear "PRIVATE"
		Press 17	Hear "FORWARD"
		Press 18	Hear "MESSAGE"
		Press 19	Hear "VOICE MESSAGE"
†	All tests begin from dial tone. On STEs, go off-hook; on ITEs with PL preselect, go off-hook; on ITEs without PL preselect, press line select button; on ATDC, press any LOOP key.		