

To set up the WYSE-55 Monitor:

1. Press **SHIFT > SELECT** to open the main setup menu.
2. Press the Function Key of the item that you want to change.

F1 - DISP - Use the Space bar to change values.

Columns	80	←
Lines	25	←
Page	1 X LINES	←
Cursor	BLINK BLK	
Display	DARK	
AutoPage	OFF	
Scrn Saver	ON	
Char Cell	10 X 5	
80/132 CLR	OFF	

F2 - GENRL

Personality	VT 220-7	←
Scrl	JUMP	
Rcv CR	CR	
Enhance	OFF	
Autoscrl	ON	
Monitor	OFF	
Status Line	ON	
Wrap EOL	ON	
Recognize DEL	OFF	

F3 - KEYBD

Keyclick	OFF
Keylock	CAPS
Repeat	ON
Language	US
Keycode	ASCII
Corner Key	COMPOSE

F4 - COMM

Comm	FDX
Mdm Rc Hsk	NONE
Aux Rc Hsk	NONE
Xmt Lim	None
Mdm Rc Hsk Level	192
Send ACK	ON
Answerback Mode	OFF
Mdm Xmt Hsk	NONE
Aux Xmt Hsk	NONE

F5 - PORTS

Mdm Baud Rate	19200	←
Aux Baud Rate	19200	←
Host Port	MODEM PORT	←
Mdm Data/Parity	8/NONE	←
Aux Data/Parity	8/NONE	←
Printer Attached	ON	←
Mdm Stop Bits	1	←
Aux Stop Bits	1	←
Nulls Suppress	ON	←

To set up the WYSE-55 Monitor:

1. Press **SHIFT > SELECT** to open the main setup menu.
2. Press the Function Key of the item that you want to change.

F1 - DISP - Use the Space bar to change values.

Columns	80	←
Lines	25	←
Page	1 X LINES	←
Cursor	BLINK BLK	
Display	DARK	
AutoPage	OFF	
Scrn Saver	ON	
Char Cell	10 X 5	
80/132 CLR	OFF	

F2 - GENRL

Personality	VT 220-7	←
Scrl	JUMP	
Rcv CR	CR	
Enhance	OFF	
Autoscrl	ON	
Monitor	OFF	
Status Line	ON	
Wrap EOL	ON	
Recognize DEL	OFF	

F3 - KEYBD

Keyclick	OFF
Keylock	CAPS
Repeat	ON
Language	US
Keycode	ASCII
Corner Key	COMPOSE

F4 - COMM

Comm	FDX
Mdm Rc Hsk	NONE
Aux Rc Hsk	NONE
Xmt Lim	None
Mdm Rc Hsk Level	192
Send ACK	ON
Answerback Mode	OFF
Mdm Xmt Hsk	NONE
Aux Xmt Hsk	NONE

F5 - PORTS

Mdm Baud Rate	19200	←
Aux Baud Rate	19200	←
Host Port	MODEM PORT	←
Mdm Data/Parity	8/NONE	←
Aux Data/Parity	8/NONE	←
Printer Attached	ON	←
Mdm Stop Bits	1	←
Aux Stop Bits	1	←
Nulls Suppress	ON	←

To set up the WYSE-55 Monitor:

1. Press **SHIFT > SELECT** to open the main setup menu.
2. Press the Function Key of the item that you want to change.

F1 - DISP - Use the Space bar to change values.

Columns	80	←
Lines	25	←
Page	1 X LINES	←
Cursor	BLINK BLK	
Display	DARK	
AutoPage	OFF	
Scrn Saver	ON	
Char Cell	10 X 5	
80/132 CLR	OFF	

F2 - GENRL

Personality	VT 220-7	←
Scrl	JUMP	
Rcv CR	CR	
Enhance	OFF	
Autoscrl	ON	
Monitor	OFF	
Status Line	ON	
Wrap EOL	ON	
Recognize DEL	OFF	

F3 - KEYBD

Keyclick	OFF
Keylock	CAPS
Repeat	ON
Language	US
Keycode	ASCII
Corner Key	COMPOSE

F4 - COMM

Comm	FDX
Mdm Rc Hsk	NONE
Aux Rc Hsk	NONE
Xmt Lim	None
Mdm Rc Hsk Level	192
Send ACK	ON
Answerback Mode	OFF
Mdm Xmt Hsk	NONE
Aux Xmt Hsk	NONE

F5 - PORTS

Mdm Baud Rate	19200	←
Aux Baud Rate	19200	←
Host Port	MODEM PORT	←
Mdm Data/Parity	8/NONE	←
Aux Data/Parity	8/NONE	←
Printer Attached	ON	←
Mdm Stop Bits	1	←
Aux Stop Bits	1	←
Nulls Suppress	ON	←

F6 - MISC

Wprt Intensity	DIM
Blk End	US/CR
Margin Bell	OFF
Wprt Rev	OFF
Attribute	CHAR
Bell Volume	OFF
Wprt Undrln	OFF
Multiple Page	ON
Rest/Act. Times	NONE

F7 - ANS1

Char Set	MULTINATIONAL
Cursor Keys	NORMAL
Feature Lock	OFF
Char Mode	MULTINATIONAL
Keypad	NUMERIC
Fkey Lock	OFF
ANSI ID	VT 220
DEL	DEL/CAN
Newline	OFF

F8 - ANS2

Print	ASCII
Send	ALL
Xfer Term	EOS
Print Area	PAGE
Send Area	PAGE
Auto Answerback	OFF
Print Term	NONE
Send Term	NONE
Keys	TYPEWRITER

F9 - TABS	F10 - ANSWERBACK
No change	No Change

F11- KEYS	F12- EXIT
No Change	<ol style="list-style-type: none"> 1. Press F12 one time. 2. Press the space bar to select ALL. (NO is the default) 3. Press F12 again to save the settings and exit the setup program.

F6 - MISC

Wprt Intensity	DIM
Blk End	US/CR
Margin Bell	OFF
Wprt Rev	OFF
Attribute	CHAR
Bell Volume	OFF
Wprt Undrln	OFF
Multiple Page	ON
Rest/Act. Times	NONE

F7 - ANS1

Char Set	MULTINATIONAL
Cursor Keys	NORMAL
Feature Lock	OFF
Char Mode	MULTINATIONAL
Keypad	NUMERIC
Fkey Lock	OFF
ANSI ID	VT 220
DEL	DEL/CAN
Newline	OFF

F8 - ANS2

Print	ASCII
Send	ALL
Xfer Term	EOS
Print Area	PAGE
Send Area	PAGE
Auto Answerback	OFF
Print Term	NONE
Send Term	NONE
Keys	TYPEWRITER

F9 - TABS	F10 - ANSWERBACK
No change	No Change

F11- KEYS	F12- EXIT
No Change	<ol style="list-style-type: none"> 1. Press F12 one time. 2. Press the space bar to select ALL. (NO is the default) 3. Press F12 again to save the settings and exit the setup program.

F6 - MISC

Wprt Intensity	DIM
Blk End	US/CR
Margin Bell	OFF
Wprt Rev	OFF
Attribute	CHAR
Bell Volume	OFF
Wprt Undrln	OFF
Multiple Page	ON
Rest/Act. Times	NONE

F7 - ANS1

Char Set	MULTINATIONAL
Cursor Keys	NORMAL
Feature Lock	OFF
Char Mode	MULTINATIONAL
Keypad	NUMERIC
Fkey Lock	OFF
ANSI ID	VT 220
DEL	DEL/CAN
Newline	OFF

F8 - ANS2

Print	ASCII
Send	ALL
Xfer Term	EOS
Print Area	PAGE
Send Area	PAGE
Auto Answerback	OFF
Print Term	NONE
Send Term	NONE
Keys	TYPEWRITER

F9 - TABS	F10 - ANSWERBACK
No change	No Change

F11- KEYS	F12- EXIT
No Change	<ol style="list-style-type: none"> 1. Press F12 one time. 2. Press the space bar to select ALL. (NO is the default) 3. Press F12 again to save the settings and exit the setup program.



1st Edition (June 14, 2006)
 © Copyright 2006 Aastra Intecom Inc.
 All rights reserved

Address comments to:
 Aastra Intecom
 Customer Information Group Manager, M/S 1N
 2811 Internet Boulevard
 Frisco, TX 75034-1851
 Telephone: 469.365.3237
 Email: techpubs@aastraintecom.com



1st Edition (June 14, 2006)
 © Copyright 2006 Aastra Intecom Inc.
 All rights reserved

Address comments to:
 Aastra Intecom
 Customer Information Group Manager, M/S 1N
 2811 Internet Boulevard
 Frisco, TX 75034-1851
 Telephone: 469.365.3237
 Email: techpubs@aastraintecom.com



1st Edition (June 14, 2006)
 © Copyright 2006 Aastra Intecom Inc.
 All rights reserved

Address comments to:
 Aastra Intecom
 Customer Information Group Manager, M/S 1N
 2811 Internet Boulevard
 Frisco, TX 75034-1851
 Telephone: 469.365.3237
 Email: techpubs@aastraintecom.com