

MITEL

5235 | IP Phone

USER GUIDE

 **MITEL** | it's about **YOU**

Contents

ABOUT THE 5235 IP Phone	1
5235 IP Phone Features	2
TIPS FOR YOUR COMFORT AND SAFETY	2
Don't cradle the handset!	2
Protect your hearing	2
Adjusting the viewing angle	3
FOR USERS ON RESILIENT 3300 ICP SYSTEMS	4
5235 IP PHONE AND LINE INTERFACE MODULE	5
USING THE TOUCH SCREENS	6
Using the Phone shutter	8
Using the People shutter	10
Using the Messages shutter	11
Using the History shutter	14
Using the Settings shutter	16
Using the Applications shutter	18
Using the on-screen keyboard	20
Getting help	20
Cleaning your Touch Screen	21
Tips for setting up your 5235 IP Phone	21

CUSTOMIZING YOUR 5235 IP PHONE	21
Specify Display Brightness and Contrast	22
Specify User Information	23
Program Key Layout on Your 5235 IP Phone	24
Specify Audio Feedback Options	25
Calibrate Screen Display	26
Specify Call Notification Behavior	26
Select Dialing Preferences	27
Adjust Ringer Control	29
Enable a screen saver	29
Program Message key	30
Program receipt of alternate message types	30
Enable URL displays on your 5235 IP Phone	30
PROGRAMING FEATURES ON YOUR KEYS	31
Tips on programming features	31
Program a feature key	34
Program a 5235 IP Phone application	35
Program a hard key	36
Clear programming from key	36
Enable personal softkey programming	37
Program Message Waiting Indicator	37
SETTING UP YOUR CONTACT LIST	38
Adding names to your contact list	38
Editing information in your contact list	39

MAKING AND ANSWERING CALLS	40
Dial from your contact list	40
Dial from your history list	40
Dial from your messages list	40
Answer a call	41
End a call	41
Redial	41
Redial - Saved Number	41
Handsfree Operation	42
Auto-Answer	42
Using the Analog line	43
CALL HANDLING	43
Hold	43
Transfer	44
Conference	44
Swap	44
Call Forward	45
Messaging - Callback	47
USING CALL HISTORY	48
Refresh your call history list	48
Delete call logs	48
Display call log details	49
Add contact information from a call log to your People list	49

USING OTHER FEATURES	50
Account Codes	50
ACD	51
Callback	51
Call Pickup	52
Calculator	52
Change Language	52
Campon	53
Display Keys	53
Day/Night	53
Do Not Disturb	54
Override (Intrude)	54
Paging	54
Direct Paging	55
Emergency Calls	56
Headset Operation	57
Headset Operation (with Feature Control Switch)	58
Make Busy	59
Message Waiting Indicator	59
Music	59
Group Paging / Meet Me Answer	60
Speak@Ease	61
Night Answer	61
Trunk Flash	61
Hot Desking	62
Hot Desk Remote Logout	63
Messaging- Advisory	63
Phonebook	64
Queue Status	64
Reminder	65
Ring Adjust	65
Speed Call	65
Tag Call	66

USING THE 5235 IP PHONE WITH 5310 IP CONFERENCE UNIT	66
Access the Conference Controller	67
Turn the conference unit on and off	67
Adjust the conference unit volume	67
Place the conference unit in Presentation mode	67
Exit the conference controller	67
Mute the conference unit	68
MESSAGING	68
Set up your mailbox	68
Set up forwarding for your Voice Mail	68
Log into your mailbox from your own extension	69
Log into your mailbox from another extension	70
Log out of your mailbox	70
Display message details	71
Play a voice message	71
Dial message sender	72
Save a message	72
Delete a message	72
Add a message sender to contact list	73
Forward a message to your email address	73
USING THE 5235 IP PHONE WEB BROWSER	74
USING THE LINE INTERFACE MODULE	75
Making and Answering Calls Using the Analog key	76
Making and Answering Calls Using the Failover Mode	77

ABOUT THE 5235 IP Phone

The Mitel 5235 IP Phone is a full-feature enterprise-class telephone that provides voice communication over an IP network. It features a large, backlit touch-screen and provides users with real-time access to applications and services such as web browsing, directory management and visual voice mail. Eight fixed feature keys and multiple Touch Screens provide convenient access to features such as Call History Logs, Contacts list, and many customizable user settings. 5235 IP Phone supports Mitel Call Control (MiNet) protocols. When used with a 3300 ICP, the 5235 IP Phone IP user can access the feature-rich set of 5235 Phone Applications. The 5235 IP Phone supports Hot Desking and Clustered Hot Desking as well as Resiliency. The 5235 is ideal for executives and managers, and can be used as an ACD Agent or Supervisor Phone, as well as a Teleworker Phone.



NN0143

5235 IP Phone Features

Feature	Function
1 Stylus	Used to select options on the shutter screens
2 Ring Indicator	Flashes to signal an incoming call
3 Speaker	Provides sound for handsfree calls and background music
4 Touch Screen	Provides a large, high-resolution viewing area that displays a set of Touch Screen functions. Opening each shutter displays an additional Touch Screen which provides access to phone features.
5 Volume Control and Contrast Control	Provides volume control when the phone is offhook. Provides contrast control when the phone is idle.
6 Fixed Function Keys	Provides functionality for Speaker, Microphone, Messages, Hold, Trans/Conf and Cancel.
7 Key Pad	Used for dialing when in phone mode
8 Handset	Used when not in headset or handsfree mode

TIPS FOR YOUR COMFORT AND SAFETY

Don't cradle the handset!

Prolonged use of the handset can lead to neck, shoulder, or back discomfort, especially if you cradle the handset between your ear and shoulder. If you talk on the phone a lot, you may find it more comfortable to use a headset. See Headset Operation for more information.

Protect your hearing

Your 5235 IP Phone has a control for adjusting the volume of the handset receiver or headset. Because continuous exposure to loud sounds can contribute to hearing loss, keep the volume at a moderate level.

Adjusting the viewing angle

The stand built into your 5235 IP Phone tilts to give you a better view of the keys.

To adjust the viewing angle:

1. Disconnect the cables to your phone.
2. Depress the button on both sides of the stand at the back of the phone to remove the stand.
3. Hinge the hooks on the base unit into the notches on the back of the phone and snap into place as follows:
 - For a high-angle mount, hinge the two lower hooks into the bottom set of notches and snap the two upper hooks into the middle set of notches.
 - For a low-angle mount, hinge the two lower hooks into the middle set of notches and snap the two upper hooks into the top set of notches.

Note: For more information about adjusting the viewing angle of your phone, refer to *the 5235 IP Phone Installation Guide* shipped with your phone.

FOR USERS ON RESILIENT 3300 ICP SYSTEMS

If during a call, you hear a beep repeated every 20 seconds it means that your phone is switching to a secondary 3300 ICP system. The call continues and there is a change in the operation of some keys and features on your phone. Normal operation resumes when your phone switches back to the primary system. If your phone is idle and switched to the secondary system, you'll see a flashing rectangle on the display. The rectangle remains until the switch to the primary system is complete.

If the 5235 IP Phone fails over to the secondary ICP, you have access to your mailbox on the secondary ICP only if a mailbox has been programmed for you by your Administrator.

Notes:

- The mailbox on the secondary ICP will not contain the same messages as the mailboxes on the primary ICP. Any preferences that are voice mail related are not carried from the primary ICP to the secondary ICP. These preferences must be set on both ICPs.
- The History, Contacts and Settings applications do not support resiliency. Your logs, contact information and any Settings on the primary ICP will not be carried from the primary ICP to the secondary ICP.


5235 IP PHONE AND LINE INTERFACE MODULE


The Line Interface module is an optional device that adds an analog phone line (POTS) capability to your 5235 IP phone. If Emergency Call Routing is not programmed on your 3300 ICP, you must use the Line Interface Module to dial emergency calls. For more information on emergency number dialing, refer to Emergency Calls.

If you have a Line Interface Module connected to your 5235 IP Phone, all programming of the Line Interface Module, except the Analog Key, is done by the Installer when your phone is installed. For more information, refer to *Program a Hard Key* and *Using the Line Interface Module*.

USING THE TOUCH SCREENS


The *Overview* Touch Screen on the 5235 IP Phone provides access to all the telephone features offered by the phone. A set of six shutters can be opened from the *Overview* screen by pressing the shutter button or shutter label.

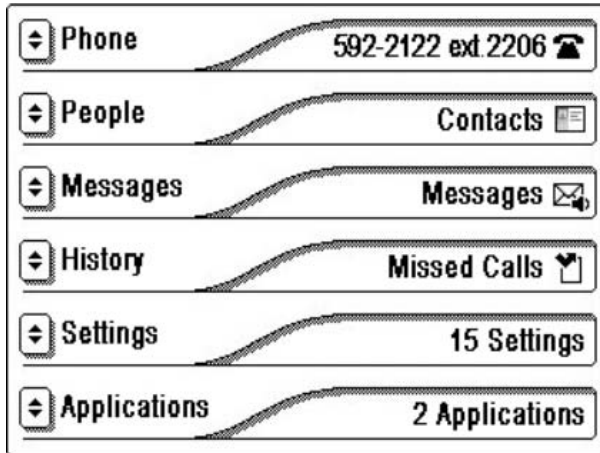




Click on the shutter button  or label to open one of the following shutters:

- **Phone:** Allows access to programmable keys and the main phone and call control interface.
- **People:** Allows access to your personal directory to add, delete or view contacts.
- **Messages:** Provides access to a visual voicemail to see messages.
- **History:** Allows you to view a log of missed, made and answered calls.
- **Settings:** Provides access to all phone settings to customize your 5235 IP Phone.
- **Applications:** Provides a launch point to the Conference Control and Web Browser applications.

To open or close any of these shutters:

1. Press the shutter button () or label using your finger or the stylus.
2. Press the shutter name using your finger or the stylus.

To navigate through the lists in each shutter:

- Press the Up and Down Scroll Buttons (): Pressing the down arrow () displays the next page of six items on the list. Pressing the up arrow () displays the previous page of items.

If there is no next or previous page of items, the appropriate button is disabled.



Using the Phone shutter

The *Phone* shutter provides access to programmable keys and the main phone interface.


In the *Overview* Touch Screen, the status area displays information regarding the *Phone* shutter.



Possible values are:

- **Not Ready:** Displayed during startup or if there is no communication established with the ICP.
- **Phone number:** Displayed as specified in the *Settings* shutter.
- **Headset** (): Indicates that a set is in headset mode.
- **DND** (): Indicates that a set is in DND (Do not disturb) mode.
- **Logged in as:** Indicates that a hot desk user is logged in.

You use the *Phone* shutter to use programmed keys and dial numbers.

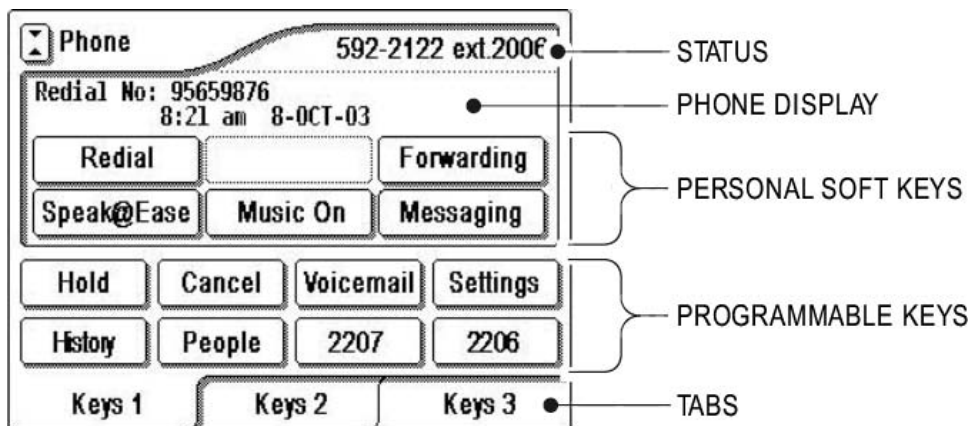

NN0146


- **Phone Display:** Displays information about the received call. This information is provided by the 3300 ICP.
- **Personal Softkeys:** Keys that allow you to access specific call control features. You can either use the default values supplied by the 3300 ICP or you can program the keys using the *Settings* shutter. The programming available from the 3300 ICP is displayed only when the 5235 is in Idle Mode.
- **Programmable Keys:** Keys that can be programmed to launch specific call control features. These keys are programmed using the *Settings* shutter. The keys are numbered starting at the bottom right corner proceeding in a right to left direction up to the top left corner. Key number 1 is always on the first tab in the bottom right hand corner and is the prime DN.
- **Tabs:** Allow you to display additional programmable keys.

Note: Your prime line key is always in the bottom right hand corner of Tab 1.


Using the People shutter

The *People* shutter provides a single location for you to add, delete, and edit contact names and numbers. You can also dial anyone on your contact list from the *People* shutter.

You launch the *People* shutter by:


1. Pressing the shutter label buttons () or shutter label.
2. Pressing a programmed key/softkey in the Phone Shutter. For information on programming keys, see *Programming Features On Your Keys*.

The *People* shutter displays a maximum of six contacts, ordered alphabetically by last name.

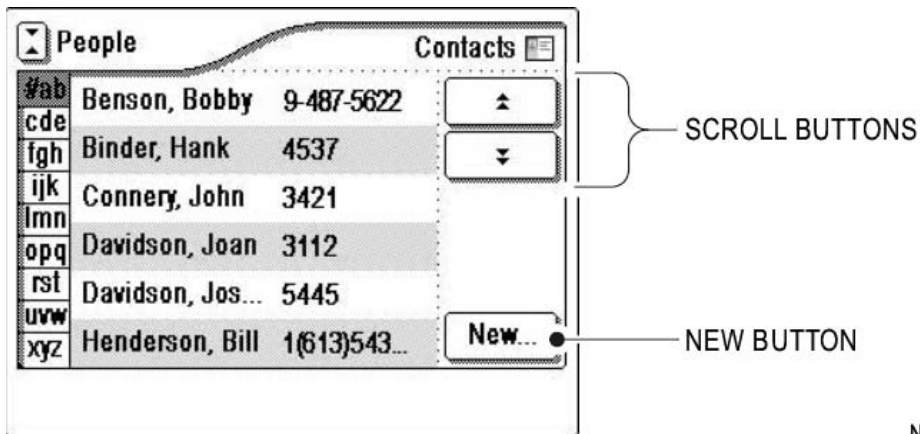

NN0147

The *People* shutter provides the following elements:


- **Scroll Buttons** (): Use to navigate through the contact list.
- **Alpha tabs**: Use to scroll to the page that contains the contact whose last name starts with the first letter on the tab label. For example, pressing the "fgh" tab, scrolls to the contact whose last name starts with "F". Multiple clicks on a tab scrolls to the next letter on the tab. For example, clicking twice on the "fgh" tab scrolls to contacts starting with "G".
- **New**: Use to add a new contact to your contact list

For information on using the *People* shutter, refer to *Setting Up Your Contact List* and *Dialing From Your Contact List*.

Using the Messages shutter

The *Messages* shutter allows you to access your voice mail messages.

You launch the *Messages* shutter by:

- Pressing the shutter label buttons () or shutter label.
- Pressing a programmed key/softkey in the *Phone* shutter. For information on how to program keys, see *Programming Features On Your Keys*.
- Pressing the Message Hard Key on the phone (This option must be specified in the *Settings* shutter. For more information on how to specify this option, see *Program Message key*).


In the *Overview* Touch Screen, the status area displays information regarding the *Messages* shutter.




Possible status values are:

1. **Not Ready:** Displayed during startup or if there is no communication established with the ICP.
2. **No Mailbox:** Displays if the current prime DN does not have a mailbox.
3. **Logged In:** Displays when the user is currently logged into their mailbox.
4. **Logged Out:** Displays if the user is logged out of the mailbox and the message indicator is not on.
5. **Messages:** Displays if the user is logged out and the message indicator is on. Indicates that you have Messages.

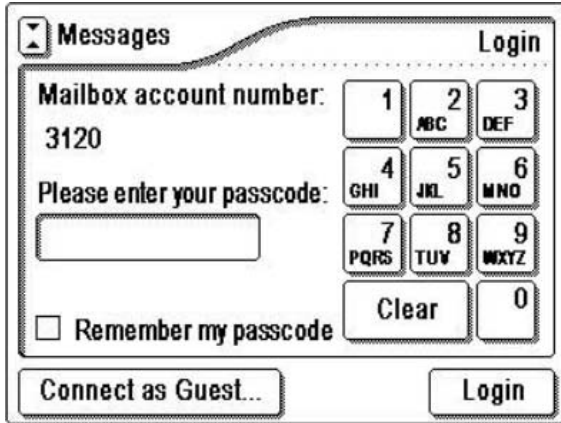

If you open the *Messages* shutter and you are not logged into your voice mailbox, the login window is displayed. You can use this window to log into the voice mailbox assigned to this extension or to log in as a guest by pressing Connect as "Guest".

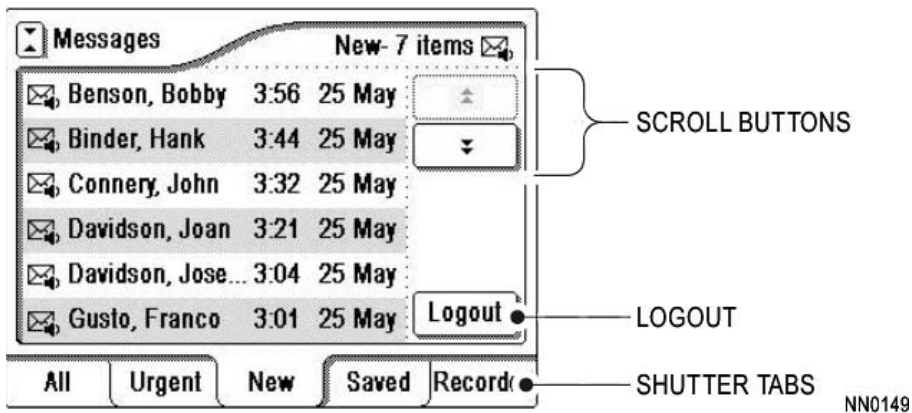

You can use the *Messages* shutter to browse through your messages. Messages are displayed in the order of newest message first.




The *Messages* shutter provides the following elements:

- **Scroll Buttons** ( ): Use to navigate through message list.
- **Shutter tabs**: Filters your messages and group them as Urgent, New, Saved and Recorded. The All tab displays all your messages.
- **Logout**: Logs you out of your voice mail.

MESSAGE DETAILS

Selecting a message from the *Messages* shutter displays the *Message Details* shutter with call information as shown in the following screens.

Screen one is displayed if the Forward to Email feature is available on the 3300 ICP. Screen two is displayed if the Forward to Email feature is not available on the 3300 ICP.

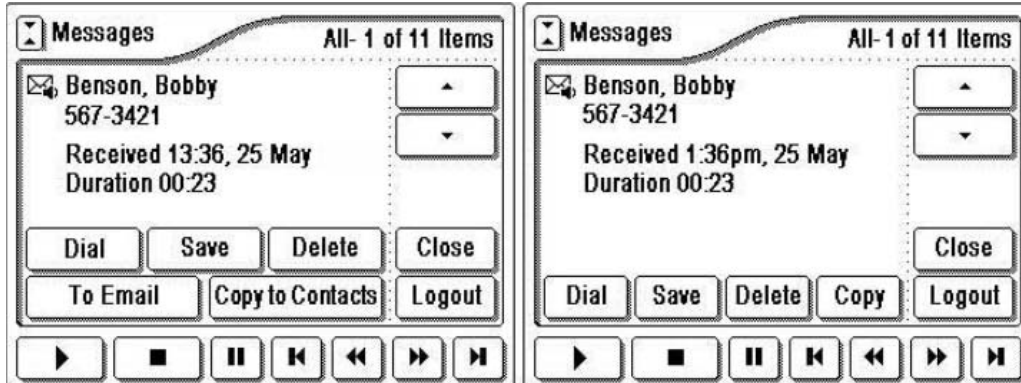


The *Messages Details* shutter provides the following elements:

- **Dial:** Use to dial the caller.
- **Save:** Saves the message.
- **Delete:** Deletes the message.
- **To Email:** Use to send the voice mail to your email.
- **Copy to Contacts:** Use to add the message sender as a contact in the *People* shutter.
- **Copy:** Copies the caller information.

Using the History shutter

The *History* shutter provides a detailed record of your incoming and outgoing calls, including calls made, received and missed. A maximum of 50 call logs can be stored. For each call log the user receives beyond fifty, the oldest call log is deleted. Duplicate call logs result in the original call log being updated with the time of the new log and the number of times the log has occurred.

You launch the *History* shutter by:

- Pressing the shutter label buttons () or shutter label
- Pressing a programmed key/softkey in the *Phone* Shutter. For information on how to program keys, see *Programming Features On Your Keys*.


In the *Overview* Touch Screen, the status area displays information regarding the *History* shutter.



Possible values are:

- **Not Ready:** Displayed during startup or if there is no communication established with the ICP.
- **Missed Calls:** Indicates missed call logs stored on the ICP (but not on the 5235 IP Phone).
- **Blank:** Indicates that there are no missed calls.

You can browse through your logged calls using the *History* shutter. Call logs are displayed in order of newest log to oldest log.

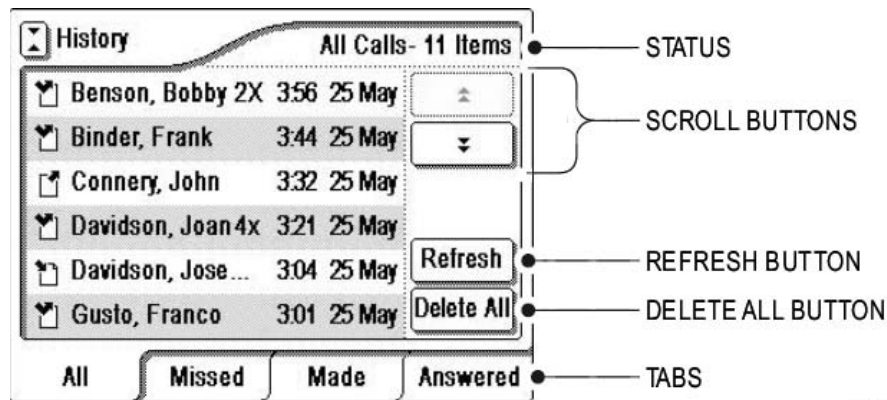

NN0148

The *History* shutter provides the following elements:


- **Scroll Buttons** (⬆ ⬇): Use to navigate through call log list.
- **Shutter tabs**: Filters your calls and groups them as Missed, Made and Answered. The All tab displays all your calls.
- **Status**: Displays the name of the current view and the number of logs in that view.
- **Refresh**: Allows you to refresh the call log list. You must press the Refresh button to display any new logs.
- **Delete All**: Allows you to delete all the call logs.

Note: Calls made and received through the Line Interface Module are not recorded in the Call History.

Using the Settings shutter


The *Settings* shutter provides a single location to access all your phone settings. It displays your current communications settings and allows you to quickly change your settings. The *Settings* shutter provides access to 16 different Setting screens.

You launch the *Settings* shutter by:


- Pressing the shutter label buttons () or shutter label.
- Pressing a programmed key/softkey in the *Phone* shutter. For information on how to program keys, see *Programming Features On Your Keys*.

You use the 16 settings, accessible from the *Settings* shutter, to customize the settings for your 5235 IP Phone.

The *Settings* shutter provides the following elements:

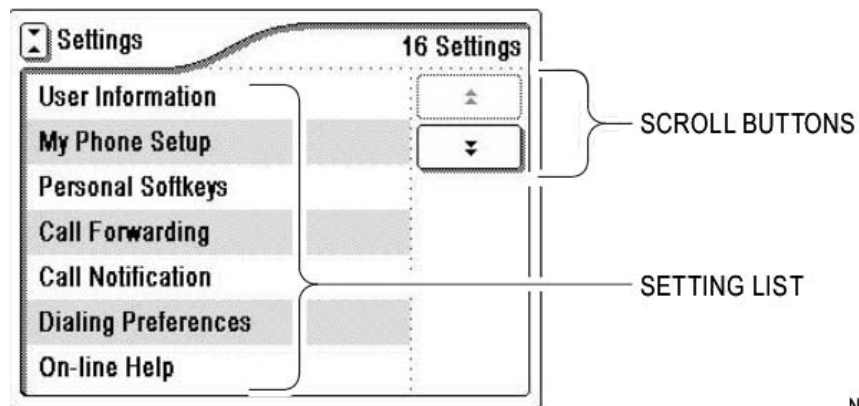

NN0150

1. **Scroll Buttons** (): Use to navigate through the Setting list.
2. **Settings list**: Each setting in this list provides access to a new window where you can view or configure specific settings for your 5235 IP Phone.


Items in the Setting list include:

- **User Information:** Use to specify the name and phone number displayed on your 5235 IP Phone.
- **My Phone Setup:** Use to customize the look and feel of your *Phone* shutter.
- **Personal Softkeys:** Use to enable Personal Softkey programming on your 5235 IP Phone.
- **Call Forwarding:** Use to create call forwarding profiles that identify where your calls are forwarded to based on the type of call answer (for example, Always, Busy Internal, Busy External, No Answer Internal and No Answer External).
- **Call Notification:** Use to specify that the *Phone* shutter automatically displays when you are making or receiving calls.
- **Dialing Preferences:** Use to specify dialing preferences for internal and external numbers.
- **On-line Help:** Displays a URL where you can access on-line help for the 5235 IP Phone.
- **Screen Calibration:** Allows you to recalibrate the screen display if you notice that your phone is not performing as expected.
- **Brightness and Contrast:** Allows you to adjust the display brightness and contrast of your 5235 IP Phone.
- **Screen Saver:** Allows you to specify a specific time of inactivity on your 5235 IP Set that triggers the screen saver to display.
- **Audio Feedback:** All the actions you perform in the shutters result in an audible beep. This setting allows you to adjust the volume of the audio feedback as well as the error beeps.
- **Message Key Configuration:** Allows you to program the Message key to automatically launch the 5235 IP Phone *Messages* application.
- **Alternate Message:** Allows you to program your 5235 IP Phone to launch the *Phone* application when it receives messages types other than phone calls.
- **Go To URL:** Allows you to enable third party URLs to display in the Web Browser application.
- **Clean Mode:** Freezes the screen so you can clean the screen without inputting any commands.
- **About 5235 IP Appliance:** This screen displays the software release.

Using the Applications shutter

The *Applications* shutter provides access to the available applications on the 5235 IP Phone.

You launch the *Applications* shutter by:

- Pressing the shutter label buttons () or shutter label.


In the *Overview* Touch Screen, the status area displays information regarding the *Applications* shutter.



Possible values are:


- **Not Ready:** Displayed during startup or if there is no communication established with the ICP.
- **2 Applications:** Indicates the number of available applications on the 5235 IP Phone. Currently, the available applications are the Conference Controller and the Web Browser.

You use the *Applications* shutter, to open the available applications.

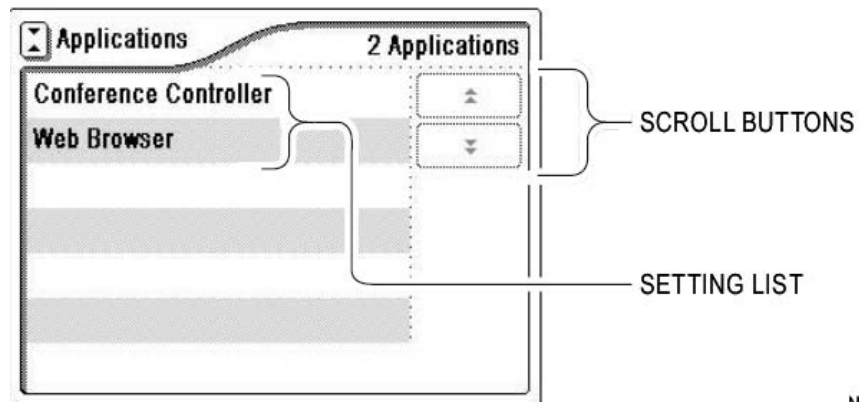

NN0151

The *Applications* shutter provides the following elements:

- **Scroll Buttons** (): used to navigate through application list.

The applications open within the *Applications* shutter. For example, as shown below, the Conference Controller window opens within the *Applications* shutter and provides you with a set of options to operate the 5310 Conference Unit with the 5235 IP Phone. For more information, see *Using the 5310 IP Conference Unit*.



Using the on-screen keyboard

In many of the Touch Screens, you are required to enter either text or numbers. To enter this information, simply press the field to display an on-screen keyboard.

To enter information using the on-screen keyboard:

1. Press the appropriate letters or numbers to enter values in the **Name** or **Number** fields. The following rules apply:
 - To change the key or number set displayed in the on-screen keyboard, press **Shift** or **Caps**.
 - To display numbers and special characters only, press **123**. To return to a number and letter display, press **123** again.
 - To clear the entire text in the field, press **Clear**.
 - To correct any mistakes, position the cursor using the Cursor Right or Cursor Left keys (⇨⇩⇨) or press directly in front of the incorrect text, press the Backspace key (⇩) and enter the correct text or number.
2. When you finish entering the information, press OK.

Getting help

To access 5235 IP Phone documentation:

1. Open the *Settings* shutter.
2. Press the scroll buttons (⇩⇨) until *Online Help* is displayed in the list.
3. Press **Online Help**.
4. In your PC browser, type the URL that is displayed on the screen.
5. Press **Close**.

Note: If you do not close this screen before you navigate away from it, the next time you open the *Settings* shutter, this screen is displayed.

Cleaning your Touch Screen

To freeze the 5235 IP Phone Touch Screens so you can clean the screen you can use the *Settings* shutter.

To freeze the touch screen using the Settings shutter:

1. Open the *Settings* shutter.
2. Press the scroll buttons until *Clean Mode* is displayed in the list.
3. Clean the screen with a soft cloth.
4. Press **Cancel** to leave Clean Mode.

Tips for setting up your 5235 IP Phone

After you receive your 5235 IP Phone, use the options in the *Settings* shutter for *Customizing Your 5235 IP Phone*. After customizing your phone, select the *Phone* shutter to verify the settings are correct. Now, you are ready to begin using your phone.



CUSTOMIZING YOUR 5235 IP PHONE

Use the *Settings* shutter to customize your 5235 IP Phone.

Specify Display Brightness and Contrast



You can adjust the brightness and display contrast either via the 5235 IP Phone volume controls (when the phone is idle) or via the *Settings* shutter.

To adjust the display contrast using the volume controls:

- Repeatedly press the volume control buttons located below the speaker to adjust the contrast. Press the up button () to increase contrast and the down button () to decrease contrast.

Note: You can use this method only when the phone is idle. If the phone is ringing, this action adjusts the ring volume. If the phone is in use, this action adjusts the handset, headset and speakerphone volume.



To adjust the display brightness and contrast using the Settings information:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Brightness and Contrast** setting is listed.
3. Press the **Brightness and Contrast** setting.
4. Press the scroll buttons () to adjust the brightness and contrast of your screen. If the arrow is disabled, you have adjusted the setting as far as possible in this direction.
5. Press the **Save** button.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

Specify User Information

To specify the phone number displayed on your 5235 IP Phone:


1. Open the *Settings* shutter.
2. Press the scroll buttons ( ) until the **User Information** shutter label is listed.
3. Press the **User Information** shutter label.
4. Press the **Name** field.
5. In the on-screen keyboard, press the appropriate letters to spell your name.
6. Press **OK**.
7. Press the **Phone Number** field.
8. In the on-screen keyboard, press the appropriate numbers for your line.
9. Press **OK**.
10. Press **Save**.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

Program Key Layout on Your 5235 IP Phone


Each 5235 IP Phone has six softkeys and 24 Programmable Keys grouped in a set of tabs. You can display these key using either three tabs (displays eight keys) or two tabs (displays 12 keys).

To change the layout of your phone display:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed.
3. Press the **My Phone Setup** setting.
4. Click the **Change Layout** button.
5. Select either **3 Tabs of 8 Keys** or **2 Tabs of 12 Keys**. The dot beside these indicates the option you have selected.
6. Press the **Save** button.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

To label the tabs:


1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed.
3. Press the **My Phone Setup** setting.
4. Select the tab at the bottom of the screen which you would like to rename.
5. Press **Rename Tab**.
6. In the on-screen keyboard, press **Clear** to erase the existing text.
7. Press the appropriate keys to enter a new name for the tab.
8. Press **OK**.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

Specify Audio Feedback Options

All the actions you perform in the shutters result in an audible beep. The beep volume in the 5235 IP Phone is related to the volume of the speaker. You can specify the beep volume using this procedure; however, adjusting the speaker volume also affects the beep volume.

To adjust the volume of the audio feedback:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Audio Feedback** setting is listed.
3. Press the **Audio Feedback** setting.
4. Set the options using the appropriate actions described below:

Option	Action
Turn audio feedback off for errors	Press Off for Error Beeps
Adjust audio for errors	Press a button between Low and High for Error Beeps
Turn audio off for button actions	Press Off for Button Beeps
Adjust audio for button actions	Press a button between Low and High for Button Beeps


5. Click **Save**.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

Calibrate Screen Display

Your 5235 IP Phone screen display is calibrated before the phone is shipped. However, if you notice that your phone is not performing as expected, it may be necessary to recalibrate the screen display.

To calibrate the screen display:


1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Screen Calibration** setting is listed.
3. Tap the center of the target with the stylus.
4. Continue tapping the center of the target as it moves around your screen.

If the screen calibration is correct, the system displays *Screen calibration was successful*. At this point, press **OK**.

If the screen calibration is incorrect, the system displays *Screen calibration failed. Calibration will be repeated in 5 seconds*.

Specify Call Notification Behavior

To specify that the Phone shutter automatically displays when you are making or receiving calls:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Call Notification** setting is listed.
3. Press the **Call Notification** setting.
4. Press the appropriate options to identify when you want the *Phone* shutter to display. For example, if you select the *when making calls* option, each time the phone goes off hook to make a call, the *Phone* shutter is displayed.
5. Press **Save**.

Notes:

- Press **Cancel** at any time to exit this shutter without making any changes.
- When the Conference Controller application is displayed, the Phone shutter is not automatically displayed when making or receiving calls.


Select Dialing Preferences

You can specify dialing preferences for both internal and external numbers. For example, you can specify that all external numbers that you dial are prefixed by the number 9 or by the area code number 613. You can also specify that internal numbers have four digits and should be dialed as such.

These rules apply only to numbers that you dial from your personal directory (*People* shutter), call logs (*History* shutter) and visual voice mail (*Messages* shutter).

Note: If no rules are specified for internal numbers, all numbers are treated as external numbers. Any preferences specified for internal numbers overrule preferences for external numbers.

To specify preferences for internal numbers:

1. Open *Settings* shutter.
2. Press the scroll buttons () until the **Dialing Preferences** setting is listed.
3. Press the **Dialing Preferences** label.
4. Press the **Internal Numbers** label.
5. In the Internal Numbers shutter, press the empty field.
6. In the on-screen keyboard, press the appropriate number to indicate the number of digits in an internal number (1-7).


Note: An internal number is considered any number less than or equal to the number you enter here. Internal numbers are dialed as entered and not interpreted in any way.

7. Press **OK**.
8. Optionally, press the check box for *Show confirmation screen for external calls*. This option specifies that a dialing confirmation screen is displayed before the internal number is dialed.
9. Press **Save**.
10. Press **Close**.

Note: If you do not close this screen, the next time you open the *Settings* shutter, this screen is displayed.

Note: Press **Cancel** at any time to exit this shutter without making any changes.

To specify preferences for external numbers:



1. Open *Settings* shutter.
2. Press the scroll buttons () until the **Dialing Preferences** setting is listed.
3. Press the **Dialing Preferences** label.
4. Press the **External Numbers** label.
5. Specify the type of external calls you make:
 - If you always make local external calls, press the button opposite **Dial as local call**.
 - If you always make long distance external calls, press the button **opposite Dial as a long distance call** and go to step 10.
 - If you make both local and long distance external calls, press the button opposite **Unknown**.
6. In the **Dial as local call** option, press the Local call prefix field.
7. In the on-screen keyboard, enter the digits (maximum of three) that must be dialed before the number itself. For example, enter the digit you must dial to get an outside line.
8. Press **OK**.
9. Optionally:
 - Press the **Remove area code** checkbox if you wish to dial your external numbers without an area code. For example, if your area code is 613 and all your external numbers are dialed to the 613 area code, you can remove the area code from your dialing numbers.
 - In the on-screen keyboard, enter the area code you wish to remove from your dialing number and press **OK**. Go to step 10.
 - In the **Dial as a long distance call** option, press the **Long distance prefix** field.
 - In the on-screen keyboard, enter a prefix (maximum three digits) and press **OK**. Go to step 10. Note that if you have the long distance prefix in your number, this step is not necessary and you are ready to go to step 10.
10. Press **Save**.
11. Press **Close**.

Note: If you do not close this screen before navigating away from it, the next time you open the *Settings* shutter, this screen is displayed. You are now finished this procedure.

Adjust Ringer Control

You can only adjust the ringer control when the 5235 IP Phone is offhook.

To adjust the Ringer Volume while the 5235 IP Phone is offhook:

- Repeatedly press the volume control buttons located below the speaker to adjust the contrast. Press the up button () to increase volume and the down button () to decrease volume.


Notes:

- If the phone is in talk state, this action adjusts the volume of the handset, headset or speaker.
- If the phone is idle, this action adjusts the contrast.

Enable a screen saver

You can specify a specific time to enable your screen saver or you can program it to turn on after a specific time period of inactivity on your 5235 IP Phone.



To enable a screen saver:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Screen Saver** setting is listed.
3. Press the **Screen Saver** setting.
4. Specify the inactivity time, which will activate the backlight switch to turn off:
 - Press the minute field.
 - Use the on-screen keyboard to enter the number of minutes of inactivity that will trigger the screen saver to display.
5. Press **OK**.
6. Press the check box opposite Show screen saver image if you wish the screen saver to be displayed. If you do not press this checkbox, only the set backlight is turned on.
7. Press **Save**.

Program Message key

The Message key on your 5235 IP Phone allows you to automatically place a call to your voice mail system. You can also program this key to automatically launch the 5235 IP Phone Message application:



To program the Message application to automatically launch when you press the message key:

1. Open the *Settings* shutter.
2. Press the scroll buttons ( ) until the **Message Key Configuration** setting is listed.
3. Press the **Message Key Configuration** setting.
4. Press the check box opposite the text *Launch the messages application instead of placing a call to my voice mail system.*
5. Press **Save**.

Program receipt of alternate message types



You can program your 5235 IP Phone to launch the *Phone* application when it receives alternate messages types (other than phone calls).

To program receipt of alternate message types:

1. Open the *Settings* shutter.
2. Press the scroll buttons ( ) until the **Alternate Messages** label is listed.
3. Press the **Alternate Mess** ages label.
4. Press the check box opposite the text *Launch the phone application when an alternate message is displayed on my set.*
5. Press **Save**.

Enable URL displays on your 5235 IP Phone

To enable third-party URLs to display in the Web Browser application:

1. Open the *Settings* shutter.
2. Press the scroll buttons ( ) until the **Go to URL** label is listed.
3. Press the **Go to URL** label.
4. Press the box opposite the text *Enable the display of 3rd party URLs in the Web Browser application.*
5. Press **Save**.

PROGRAMING FEATURES ON YOUR KEYS

Tips on programming features

You can program your 5235 phone personal softkeys and programmable keys to enable features. To program your keys, use:

- *Settings* shutter
- 5235 Superkey

The 5235 Superkey should only be used for programming the following features:

- Calculator
- Timed Reminder
- Queue Status
- Phonebook
- Callbacks
- Ringer Adjust
- Language
- Pickup Group

For information on how to program a Superkey on your 5235 IP Phone, refer to *Program a Hard Key*.

Note: When you change the language display on your 5235 IP Phone, this only affects the prompts that are delivered to the set from the 3300 ICP. All other prompts on the 5235 are in English for this release.

You can assign the following to a softkey or a programmable Key:

- **Features:** see *Program a Feature key*
- **Applications:** People, Messages, History, Settings, Web-browser and Conference Controller (see *Program a 5235 IP Phone Application*)
- **5235 Phone hard key functions:** Hold, Transfer/Conference, Cancel, Microphone, Analog Line, Message, Redial and Speaker (see *Program a hard key*)

Note: When you program a softkey, you must enable softkey programming in order for your programming to take effect. Once softkey programming is enabled, the default programming from the 3300 ICP is no longer available.

Features available for programming on softkeys or programmable keys

Feature	Softkey	Programmable
Speed Call	Yes	Yes
Auto Answer	No	Yes
Paging	No	Yes
Music	Yes	Yes
Headset	No	Yes
Night Answer	Yes	Yes
Make Busy	No	Yes
Do Not Disturb	No	Yes
Direct Page	No	Yes
Account Code Verified	Yes	Yes
Account Code Non Verified	Yes	Yes
Pickup	No	Yes
Call Back	No	Yes
Campon	No	Yes
Override	No	Yes
Single Flash	No	Yes
Double Flash	No	Yes

Feature	Softkey	Programmable
Meet Me Answer	No	Yes
Message Waiting Indicator	No	Yes
Emergency Call	No	Yes
Tag Call	No	Yes
Phonebook	Yes	Yes
Speak@Ease	Yes	Yes
ACD	Yes	Yes
Hot Desking	Yes	Yes



Hard keys available for programming on softkeys or programmable keys

Hard Key	Softkey	Programmable
Superkey	Yes	Yes
Microphone	Yes	Yes
Message	No	No
Redial	Yes	Yes
Speaker	Yes	Yes
Hold	No	Yes
Transfer/Conference	No	Yes
Cancel	No	Yes
Analog Line	No	Yes

Program a feature key

You use either softkeys or programmable keys to program features using the following procedure.

To program a feature key:

1. If you are programming this feature on a softkey, verify that softkey programming is enabled. For more information, see *Enable softkey programming*.
2. Open the *Settings* shutter.
3. Press the scroll buttons () until the **My Phone Setup** setting displays
4. Press the key you wish to program. A programming window with three tabs displays.
5. Press the **Features** tab.
6. Use the scroll buttons () to move through the features list and select a feature you wish to program.
7. Press the feature label (for example, press **Paging** feature label).
8. Press the **Label** field.
9. In the on-screen keyboard, press the appropriate letters for the label. (For example, Paging).
10. Press **OK**.
11. If you are programming any feature other than Message Waiting Indicator and Speed Call, press **Save** and you are finished with this procedure. If you are programming Message Waiting Indicator and Speed Call, perform the following steps:
 - Press the **Phone Number** field.
 - In the on-screen keyboard, press the appropriate numbers that correspond to the phone whose messages you wish to be notified of.
 - Press **Save**.


Note: It is not necessary to clear programming from a key before you reprogram it.

Program a 5235 IP Phone application

You can program a personal softkey or a programmable key on your 5235 IP Phone to automatically launch the following 5235 IP Phone applications:

- People
- Messages
- History
- Conference Controller
- Web Browser

To program the automatic launch of a 5235 IP Phone application:



1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed
3. Press the **My Phone Setup** setting.
4. Press the key you wish to program. A programming window with three tabs displays.
5. Press the **Applications** tab.
6. Press on an Application name from the list.
7. Press **Label**. An on-screen keyboard displays.
8. Use the on-screen keyboard to enter label text (up to 15 characters) and press **OK**.
9. Press **Save**.

Notes:

- To return to the applications list at any time, press **Cancel** or the **Applications List** label.
- It is not necessary to clear programming from a key before you reprogram it.

Program a hard key

To program Superkey, Hold, Transfer/Conference, Cancel, Microphone, Analog Line, Message, Redial and Speaker:


1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed.
3. Press the **My Phone Setup** setting.
4. Press the key you wish to program. A programming window with three tabs displays.
5. Press the **Hard keys** tab.
6. Press on a hard key from the list. Use the scroll buttons () to display additional hard keys.
7. Press **Label**. An on-screen keyboard displays.
8. Enter a text label for this hard key and press **OK**.

Note: It is not necessary to clear programming from a key before you reprogram it.

Clear programming from key

It is not necessary to clear programming from a key before you reprogram it. However, you may wish to clear the programming from a key if you are no longer using it.


To clear the feature or hard key programming associated with the key:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed.
3. Press the **My Phone Setup** label.
4. Press the key you wish to clear.
5. Press **Clear Key**. The programming window is displayed.
You can either press **Cancel** to close this window or you can reprogram this key immediately.

Enable personal softkey programming



When you enable personal softkey programming, the default softkeys programmed by the 3300 ICP (when it the 5235 IP Phone is idle) are no longer displayed and are not available.

To enable softkey programming:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Personal Softkeys** setting is listed.
3. Press the **Personal Softkeys** setting.
4. Press the checkbox for *Personal Softkey in effect*.
5. Press **Save**.

Program Message Waiting Indicator

You can program a Message Waiting Indicator (MWI) to a Programmable key so that when a message is left on another phone, you are notified by a flashing key.

1. Open the *Setting* shutter.
2. Press the scroll buttons () until the **My Phone Setup** setting is listed.
3. Press the **My Phone Setup** setting.
4. Press the key you wish to program. A programming window with three tabs displays.
5. If the **Features** tab is not selected, press the **Features tab**.
6. Use the scroll buttons () to scroll through the features list until **Message Waiting Indicator** is listed.
7. Press **Message Waiting Indicator**.
8. Press the Number field.
9. In the on-screen dial pad, press the appropriate numbers for the phone number (you will be notified of messages on this phone number) and click **Done**.
10. Click **Save**.

SETTING UP YOUR CONTACT LIST

Use the *People* shutter to set up your contact list.

Adding names to your contact list

You can add a name to your contact list by entering it directly using the *People* shutter or by copying a number from a received call in the *History* shutter or *Message Shutter*.



To add a name to your contact list using the People shutter:

1. Open the *People* shutter.
2. Press **New**.
3. Press the **Name** field
4. In the on-screen keyboard, press **First Name** field.
5. Press the appropriate letters to spell the first name of your contact.
6. Press the **Last Name** field.
7. Press the appropriate letters to spell the last name of your contact.
8. Press **OK**.
9. Press the **Number** field.
10. In the on-screen keyboard, add the appropriate information. For more information, see *Using the on-screen keyboard*.
11. Press **OK**.
12. Press **Save**.

You can add a number to your contact list by copying the number from the *Message* shutter application. For more information, see *Add message sender to contact list*.

You can also add a number to your contact list by copying the number from the *History* shutter application. For more information, see *Add contact from call log to People list*.

Editing information in your contact list

1. Open the *People* shutter.
2. Locate the name you wish to edit using one of the following methods:
 - Use the scroll buttons ( ) to scroll through the contact list.
 - Use the alpha tab that corresponds to the first letter of your contacts last name.
3. Press the Name you wish to edit.
4. Press **Edit**.
Note: If you wish to delete the name from your contact list, press **Delete**.
5. Perform the following steps:
 - To edit the Contact name, do steps 6 through 11 and continue.
 - To edit the Phone number, do steps 12 through 14 and continue.
 - To edit both the contact name and phone number, do steps 6 through 15.
6. Press the **Name** field.
7. Press the **First Name** field.
8. In the on-screen keyboard, update the appropriate information. For more information, see *Using the on-screen keyboard*.
9. Press the **Last Name** field.
10. In the on-screen keyboard, update the appropriate information. For more information, see *Using the on-screen keyboard*.
11. Press **OK**.
12. Press the **Number** field.
13. In the on-screen keyboard, update the appropriate information. For more information, see *Using the on-screen keyboard*.
14. Press **OK**.
15. Press **Save**.





MAKING AND ANSWERING CALLS

You can make a call using one of the following methods:

1. Press the programmed key associated with the party you want to call.
For more information about programming keys, see *Programming Features On Your Keys*.
2. Dial the number using the phone keys.
3. Dial a number from your contacts list, history list or messages list.

Dial from your contact list

To dial a contact from your contact list:

1. Open the *People* shutter.
2. Locate the contact you wish to dial using one of the following methods:
 - Use the scroll buttons ( ) to scroll through the contact list.
 - Use the alpha tab that corresponds to the first letter of your contacts last name.
3. Press the contact name you wish to dial.
4. Press **Dial**.
Note: You can look for other contacts by pressing the scroll buttons ( ).
5. Continue the call using the speakerphone or lift the handset.

Dial from your history list

To dial a contact from your history list:

1. Open the *History* shutter.
2. Select a call log from the call logs list.
3. In the *History Details* window, select **Dial**.


Dial from your messages list

To dial a contact from your messages list:

1. Open the *Messages* shutter.
2. Select a message from the Messages list.
3. In the *Messages Details* window, select **Dial**.


Answer a call

Do one of the following:

1. Select the programmable line key for the ringing line that is flashing.
2. Lift the handset or press HANDSFREE ().
3. If the *Phone* shutter is open, press the line key that is flashing.

End a call

Do one of the following:

1. Press the Hang Up or Cancel key ().
2. Replace the handset.
3. Press the key that you have programmed as Cancel.
4. If you are in Handsfree mode, press the Speaker key.

Redial

To redial the last number that you manually dialed:

1. Lift the handset.
2. Press that key that you have programmed as a Redial command key.

Redial - Saved Number

To save the last number that you manually dialed:

1. Lift the handset.
2. Dial the appropriate feature access code.

To Redial a saved number:

1. Lift the handset.
2. Dial the appropriate feature access code.

Handsfree Operation


To enable Handsfree Operation:

- Press the speaker phone key ().



To switch from Handsfree to Handset operation during a call:

- Lift the handset.

To temporarily disable/enable the microphone during Handsfree Operation:

1. Press the microphone phone key () (the microphone LED is red when the microphone is disabled).
2. Press the key that you have programmed as microphone.

To end a Handsfree call, do one of the following:

1. Press the speaker phone key ().
2. Press the Cancel phone key ().
3. Press the key that you have programmed to Cancel.


Auto-Answer

When the Auto-Answer feature is active, incoming calls ring briefly, and then the phone answers the call in Handsfree mode. You can continue the call handsfree or use the handset.


To enable or disable Auto-Answer:

- Press Auto-Answer key. (See *Programming Features on Your Keys* for instructions on programming features on your phone.) The key is highlighted and all incoming calls are answered in Handsfree mode.

To switch from Handsfree mode to handset mode:

1. Lift the handset
2. Press the speaker phone key ().

To end a call:

- Press the Cancel phone key (), press the **Hang Up** Softkey or wait for the caller to hang up.


Using the Analog line

If the 5235 IP Phone is not connected to the 3300 ICP, the phone can support the Line Interface Module. In this scenario, the Splash screen is displayed.

CALL HANDLING

Hold

To place a call on Hold:

1. Press HOLD. ()
2. Press the key that you have programmed as Hold. The indicator flashes on the line that has the held call.

Note: You can only retrieve a call from hold when the 5235 IP Set is idle.

To retrieve a call from Hold:




- Do one of the following:
 - Lift the handset and press the flashing line.
 - Press the flashing indicator.
 - Use the Add Held feature to conference into the held call.

To retrieve a call from Hold at another extension:

- Press the flashing line key. -or- Dial the appropriate feature access code and the number of the extension that placed the call on Hold.



Transfer

To Transfer an active call:

1. Press Trans/Conf command key () or press the key that you have programmed to Trans/Conf.
2. Dial the number of the next party.
3. Do one of the following:
 - a. To complete the Transfer, hang up or press the Cancel phone key ().
 - b. To announce the Transfer, wait for an answer, consult, and then hang up or press the Cancel phone key ().
 - c. To return to the first call before completing the transfer, press the highlighted key.

Conference

To set up a Conference when a two-party call is already established, or to add another party to an existing Conference:


1. Press Trans/Conf phone key () or the key that you have programmed to Trans/Conf.
2. Dial the number of the next party.
3. Wait for an answer.
4. Press the Trans/Conf phone key () or the key that you have programmed to Trans/Conf.

To leave a Conference:

- Hang up or press the Cancel phone key ().

Swap

To call another party when you are in an established two-party call:

1. Press Trans/Conf phone key ().
2. Dial the number.

To alternate between the two parties:

- Press the **Trade Calls** softkey.

Call Forward

Call Forward lets you redirect incoming calls to an alternate number when your phone is busy, when you're not answering, or all the time.


PROGRAM CALL FORWARD

You can create Call Forward profiles that identify where to send your incoming calls. Once you create and save a Call Forward profile, in the Settings Touch Screen, you can enable or disable it at any time.

Notes:

- The None Profile is a default profile provided by the system. It has no numbers programmed and is used to turn off Call Forwarding.
- The default profile is the 5235 IP Sets current call forwarding. The dot (.) next to the profile shows the current active profile.
- Only one call profile can be active at a time.


To create a Call Forward profile:

1. Open the *Settings* shutter.
 2. Press the scroll buttons () until the **Call Forwarding** setting is listed.
 3. Press the Call Forwarding setting.
 4. Press **New**.
 5. Press **Profile Name**. An on-screen keyboard displays.
 6. Press the appropriate keys in the on-screen keyboard to enter the profile name and press **Save**. This profile name identifies where your phone calls will be forwarded to.
 7. Select the check boxes opposite Call Forward categories as follows:
 - **Always:** forwards all your phone calls
 - **Busy Internal:** forwards internal phone calls after several rings if your line is busy
 - **Busy External:** forwards external phone calls after several rings if your line is busy
 - **No Answer Int:** forwards internal phone calls redirects your calls after several rings if you don't answer
 - **No Answer Ext:** forwards external phone calls redirects your calls after several rings if you don't answer

Note: You can select one or more settings, however, the Always setting takes priority over all other settings.
 8. For each of the Call Forward categories:
 - Press the blank field to display the on-screen keyboard.
 - In the on-screen keyboard, enter the appropriate number.
 - Press **OK**.
 9. Press **Save**. The edit window closes. This profile is saved but it is not activated. To activate this profile, see *Activate Call Forward*.
- Note:** Press **Cancel** at any time to exit this shutter without making any changes.


ACTIVATE CALL FORWARD

To turn Call Forward on once it has been programmed:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Call Forwarding** setting is listed.
3. Press the Call Forwarding setting.
4. Press the appropriate Profile setting.
5. Press **Activate**.

CANCEL CALL FORWARD

To cancel Call Forward:

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Call Forwarding** setting is listed.
3. Press the Call Forwarding setting.
4. Press the appropriate Profile setting.
5. Press **None** (Turn Off Call Forwarding).

Messaging - Callback

To leave a Message Waiting Indication on a telephone when you hear busy or ringback tone:

1. Dial the number.
2. If you hear a busy or ringback tone, press the **Leave A Msg** key.
The MWI flashes on the phone you are calling. When the recipient of your call presses the message key on the phone you called, your Directory Number is displayed on that phones Touch Screen.

USING CALL HISTORY

Refresh your call history list

You can browse through your logged calls using the *History* shutter. If the shutter label indicates you have missed calls, you can refresh your call history list to view these calls.

To refresh your call history list:

1. Open the *History* shutter.
2. Press the tab that corresponds to the call history list that you want to refresh (For example, All, Missed, Made or Answered).
3. Press **Refresh**.
Your list is updated with any new calls and the shutter label is now blank.

Delete call logs

You can delete a single call log or you can delete a group of call logs (for example, you may wish to delete All, Missed, Made or Answered calls).

To delete one call log:

1. Open the *History* shutter.
2. Press the tab that contains the call history log that you want to delete (that is, press **All**, **Missed**, **Made** or **Answered**).
3. Press the call you wish to delete.
4. Press **Delete**.
The next call in the list is displayed.

To delete all call logs:

1. Open the *History* shutter.
2. Press the tab that contains the group of logs that you want to delete (For example, if you want to delete all the calls you answered, press the **Answered** tab).
3. Press **Delete All**.
4. In the confirmation display, press **Delete**.
All the calls listed within this tab are deleted.

Display call log details

1. Open the *History* shutter.
2. Press the tab that contains the call logs that you want to display (For example, **All**, **Missed**, **Made** or **Answered**).
3. Press the call log for which you require information.

The details area of the shutter indicates:

- status of the call (Missed, Made or Answered)
- whether the call is new (status is bolded)
- number and name (if available) of caller
- duration of call (if duplicate call, duration of last call)
- number of times the call occurred
- indication if call is a Transfer or Conference call
- Display other numbers in your call log by pressing the up or down buttons ()

Add contact information from a call log to your People list

1. Open the *History* shutter.
2. Press the tab that contains the call whose contact information you want to copy (for example, **All**, **Missed**, **Made** or **Answered**).
3. Press the call whose contact information you want to copy to your People list.
4. Press **Copy to Contacts**.






USING OTHER FEATURES

Account Codes

An account code is a series of digits that you assign to your calls, usually for accounting purposes. The code identifies the account in the call records that your system generates. A forced account code is usually entered from another extension, enabling you to use features or make calls that the extension otherwise could not. If you want this feature enabled on your phone, ask your System Administrator.

Note: To use Account Codes, you must have a key programmed to the feature Account Codes.

To use Forced Account Codes:

1. Press the Account Code key.
2. Using the phone keys, enter the Account Code digits.
3. Do one of the following:
 - To submit the Account Code, press the # key.
 - To correct an entry error, press the Softkey that contains your coded entry (   ). Each time you press the key, the last number entry is deleted.
 - To cancel, press the Cancel command key () or the key you programmed as Cancel.

To enter an Account Code during a call:

1. Press the Account Code key.
2. Using the phone keys, enter the Account Code digits.
3. Do one of the following:
 - For a verified account code, press the Verify/Save command key.
 - For a non-verified account code, press the Save command key.

Note: Verified Account Codes let you access features that are not normally available at a station. Non-verified Account Codes let you enter codes on the SMDR record for billing and/or call management

ACD

If your 5235 IP Set is ACD-enabled, you can log in as an agent. When there is no agent logged onto an ACD-enabled set, *LOGGED OUT* is displayed.

To log in as an ACD agent:

1. Press the ACD key that you programmed. For more information on how to program an ACD key, see *Programming Features On Your Keys*.
2. Press **Agent Login**.
3. Enter your Agent ID, using the key pad.
4. Press **Enter**.
The text, *LOGGED OUT* disappears.

Callback

The Callback feature allows you to be notified when a busy phone becomes free or when a phone has been used after a no-answer condition was encountered.

To request a Callback when you reach a busy or unanswered station:

1. Press the key you programmed to **Call Me Back**.
2. Hang up.

When the party is available, your phone starts ringing, and the display shows the Callback ringing indicator with the party's phone number.

To answer a Callback:

- When you see the Callback ringing indicator, lift the handset.

Call Pickup

To answer a call that is ringing at another extension in your Pickup Group:

1. Lift the handset.
2. Press the key that you programmed as **Pickup**.

To answer a call that is ringing at another extension not in your Pickup Group:

1. Lift the handset.
2. Dial the appropriate feature access code.
3. Dial the number of the ringing station.

Calculator

Calculator allows the 5235 IP Phone to be used as a basic four function calculator by using the telephone keypad, display and softkeys.

To use the Calculator:

1. Press the Superkey.
2. Press Calculator.
Note: If Calculator is not displayed, press **More** to display additional Superkey features.
3. Use the following to perform your calculations:
 - Telephone keypad is the numeric keypad
 - * key is the decimal point key
 - Softkeys provide Clear Entry/Clear (CE/CLR), x, -, +/=, ÷
 - Press Superkey to exit.

Change Language

You can change the language display on your 5235 IP Phone, using this feature. Note that this only affects the prompts that are delivered to the set from the 3300 ICP.

To change language:

1. Press Superkey.
2. Press Change Language.
Note: If Change Language is not displayed, press **More** to display additional Superkey features.
3. Press the language you wish to display the 3300 ICP prompts.

Campon

When you get a busy tone, you can use the Campon feature to be notified when the busy party becomes available.

To Campon to a busy station:

- Press the **I Will Wait** softkey.

To retrieve a call when you hear the Campon tone:

- You can use the Trade Call or Call Swap feature with the Trans/Conf hardkey or a programmable line key.

Display Keys

To determine what feature a key has been programmed with:

1. Press Superkey.
2. Press Display Keys.
Note: If Display Keys is not displayed, press **More** to display additional Superkey features.
3. Press a Personal Key.
The feature that is programmed on this key is displayed.
4. Press Superkey to exit.

Day/Night

The Day/Night feature allows you to enable or disable night services using the Superkey.

To enable Day or Night services:

1. Press Superkey.
2. Press Day/Night.
Note: If Day/Night is not displayed, press **More** to display additional Superkey features.
3. Press the service you require.

Do Not Disturb

When you enable Do Not Disturb, callers will get a busy tone, and an on-screen text message indicating that you do not wish to be disturbed.

To activate or deactivate Do Not Disturb:

- Press the Do Not Disturb key that you programmed. The key is highlighted when Do Not Disturb is activated and is not highlighted when Do Not Disturb is not activated.

To activate Do Not Disturb from a remote extension:

1. Lift handset.
2. Dial the appropriate feature access code.
3. Dial the number of the station to which Do Not Disturb is to apply.
4. Hang up.

To deactivate Do Not Disturb from a remote station:

1. Lift handset.
2. Dial the appropriate feature access code.
3. Dial the number of the station with Do Not Disturb activated.

Override (Intrude)

When you dial a number whose owner has enabled Make Busy, your phone displays the message indicating that the line is busy. You have the option to override this setting.

To use Override when you encounter a busy tone:

1. Press the key you programmed as **Override**.
2. Wait for an answer.

Paging

To use Paging:

1. Lift handset.
2. Press the key that you have programmed to **Page**.
3. Dial the Paging zone number (if required).
4. Make the announcement.

Direct Paging

Direct Paging allows you to page a called party through the telephone speaker on that persons phone.

To page a user at another extension:


1. Lift the handset.
2. Press the key you programmed to **Direct Page**.
3. Dial the extension number.
4. Speak to the dialed party after the tone.

If Handsfree Answerback has been turned on at your phone and you receive a Direct Page while your phone is idle, or while you are on a handset or headset call, a handsfree call will automatically be established after a single tone. The following instructions assume that Handsfree Answerback is not enabled on your phone.


To answer a Direct Page (indicated by a single burst of tone):

- Lift handset. - or - Press MICROPHONE ().

To answer a page while using the handset:

- Press MICROPHONE ().

To enable or disable Handsfree Answerback:

- Press MICROPHONE () while your phone is idle.

Emergency Calls

Warning for emergency number dialing: Consult your local authorities for Emergency Numbers and 911 or equivalent service availability in your area.

There are two methods of dialing emergency numbers, based on the programming of your 3300 ICP:

- Emergency Call Routing NOT programmed
- Emergency Call Routing programmed

Caution: Verify with your System Administrator which type of emergency number dialing you can use.

EMERGENCY CALLS WHEN EMERGENCY CALL ROUTING NOT PROGRAMMED

If Emergency Call Routing is NOT programmed, Emergency Number dialing should only be performed by picking up the handset and selecting the Line Interface Module key you have programmed. If Privacy Mode is enabled and the Line Interface Module key local line is busy, dialing will not occur on the Line Interface Module line.

Emergency dialing using an IP connection may not be supported due to ICP system configuration and country location. For more information, contact your System Administrator.

To make an Emergency Call using the Line Interface Module line:

1. Lift the handset.
2. Press the Line Interface Module key that you have programmed.
The set indicates *IP FAIL: ANALOG CALL*
3. Dial your Local Emergency Number.

To make an Emergency Call using the Line Interface Module line, when the IP connection has failed:

1. Lift the handset.
2. Press the Line Interface Module key that you have programmed.
The set indicates *IP FAIL: ANALOG CALL*.
3. Dial your Local Emergency Number.

EMERGENCY CALLS WHEN EMERGENCY CALL ROUTING PROGRAMMED

Note: This procedure is in addition to the methods described above.



To make an Emergency Call if Emergency Call Routing is programmed:

1. Lift the handset.
2. Dial your Local Emergency Number (911 or equivalent).

For more information on using the Line Interface Module line, refer to Using the Line Interface Module.

Headset Operation


To enable Headset Operation:

- Press the Headset key (). When Headset Operation is enabled the Headset icon () is displayed beside the extension number

To answer a call (when Auto Answer is disabled):

- Press the line key with the flashing icon.

To hang up:

- Press the Cancel key ().


To disable Headset Operation:

- Press the Headset key ().

Headset Operation (with Feature Control Switch)

IMPORTANT NOTE: Mitel Networks Headsets with Feature Control Switch must be installed in the dedicated headset jack on the back of the phone. Installation will disable your handset microphone. Disconnecting the headset at the jack or at the quick-disconnect plug restores handset operation. If handset operation is required for an extended period of time, you should press the Headset feature key to return the telephone to handset mode.

To enable Headset Operation:

- Press the Headset key that you programmed. When Headset Operation is enabled the Headset icon () is displayed beside the extension number.

To answer a call:

- Press line key with the flashing icon. -or- Quickly press and release the headset's feature control switch.

To mute the headset microphone:

- Press and hold the headset's feature control switch.

To hang up:

- Press Hang-up command key. -or- Quickly press and release the headset's feature control switch.

To disable Headset Operation:

- Press the Headset key.

Make Busy

You can use the Make Busy feature to have your phone appear busy to other callers. If callers dial your phone number when Make Busy is enabled a message indicating that your line is busy is displayed on their phones.

To disable Make Busy:

- Press the key you programmed to **Make Busy**. The key illuminates when Make Busy is activated and *MAKE BUSY* is displayed.

To disable Make Busy:

- Press the key you programmed to **Make Busy**.

Message Waiting Indicator

The Message Waiting Indicator (MWI) feature allows you to be notified when messages have been left on another phone. Once you have programmed a key to MWI, this key is always enabled.

To use MWI to contact the extension that left a message:

- Press the key you have programmed to MWI.

Music

To turn Music on and off when the phone is idle:

- Do one of the following:
 - To turn the music on, press the key that you programmed to Music.
 - To turn the music off, press the key that you programmed to Music.

When the Music is activated, the key you have programmed is highlighted.

Group Paging / Meet Me Answer

Group Paging allows you to page a group of telephones through their built-in speakers. You can belong to as many as three paging groups with one group designated as your "prime" group.

When you need to respond to a Group Page but don't know the identity or extension number of the paging party, use the Meet Me Answer feature. You have up to 15 minutes after receiving the page to use Meet Me Answer.

To make a Group Page:

1. Lift the handset.
2. Press the key you have programmed to **Direct Page** or dial the appropriate feature access code.
3. Do one of the following:
 - To page your prime page group, press #.
 - To page a specific page group, dial the page group directory number.
4. Speak to the dialed party after the tone.

To respond to a Group Page by using Meet Me Answer:

1. Lift handset.
2. Press the key you have programmed to Meet Me Answer or dial the appropriate feature access code.
(See *Programming Features on Your Phone* for instructions on programming features to your phone.)
3. Do one of the following:
 - To respond to a page from your prime page group, press #.
 - To respond to a page from a specific page group, dial the page group directory number.

Speak@Ease

Users of the Speak@Ease softkey can place a call by speaking the name of the person they wish to dial. Speak@Ease enables you to have access to Mitel Networks Speech Server. The Speech Server is a speech recognition application that routes incoming calls to a specific destination based on spoken commands.

To dial a call using Speak@Ease:

1. Press the key you have programmed to Speak@Ease.
2. Speak the name of the person you wish to call.

Night Answer

The Night Answer feature allows you to route calls to an attendant or message at night.

To enable Night Answer:

- Press the key you programmed to Night Answer. When you have enabled Night Answer, this key is highlighted.

To disable Night Answer:

- Press the key you programmed to Night Answer

Trunk Flash

The Trunk Flash feature allows you to access Centrex features (if available) while you are talking on an outside call.

To flash a trunk while talking on an outside call:

1. Press the key you have programmed to Flash.
Note: You can program a key to single flash or double flash.
2. Wait for dial tone.
3. Dial the Centrex feature access code.

Hot Desking

Hot Desking allows you to log into the telephone system from any phone designated as a Hot Desk phone. When you log in at the phone using your assigned Hot Desk User Extension Number, the phone assumes all your speed dials, features keys, call forwarding setup, and line appearances - even your language preference for the display. Any changes you make to the phone while you are logged in--for example, adding a speed dial--are saved to your personal profile. Logging in activates your profile on any phone that supports Hot Desking.

Note: All Hot Desking profiles have 24 programmable keys.

When you log in as a hot desk user, all the data in the History shutter is updated for you. You do not see any call logs for the phones registered DN; you only see your history data. When you log out, the registered DN's history data is displayed. To access your voice mail when you are logged in as a hot desk user, you must log in to your voice mail.

To log into a Hot Desking phone (the phone must be idle):

1. Open the *Phone* shutter.
2. Press the key you have programmed to **HotDesking**.
3. Press the **Login** key.
4. Using the phone keys, enter your Hot Desk User Extension Number, and then press **OK**.
5. Enter your pin number and press **OK**.

To log out of Hot Desking phone (the phone must be idle):

1. Open the *Phone* shutter.
2. Press the key you have programmed to **HotDesking**.
3. Press the **Logout** command key.
4. Press the **Confirm** command key.

Note: Your profile can only be active on one phone at a time. If you log in from another phone without logging out from the first one, the system will automatically deactivate your profile on the first phone.

Hot Desk Remote Logout

A user who has forgotten to log out of a Hot Desking phone can be logged out from a phone that is configured to allow Hot Desk Remote Logout.

Note: This feature must be allowed by your System Administrator via the Class of Service.

To remotely log out a Hot Desking phone:

1. Using the phone keys, dial the appropriate feature access code.
2. Using the phone keys, dial the Hot Desk User Extension Number that you want to log out.
3. Press the **Logout** command key.
4. Press the **Confirm** command key.

Messaging- Advisory

This feature enables you to display a message, at the calling extension. You select your message from a list of pre-defined messages. The message remains on the calling extension's LCD for the duration of ringing and is cleared when the caller hangs up or the call is answered.

To use Messaging-Advisory:

1. Press the **Superkey**.
2. Press **Messaging**
3. Press **Advisory**.
4. Press **Next Message** until you see the message you wish to display.
Screen displays *Show Message No*
5. Enter the message number using the dialing keypad.
6. Press **Enter** to save.

Phonebook

Phonebook lets you locate and telephone a system user based on name, extension number, department and or location.

To use Phonebook:

1. Press the Superkey.
2. Press Phonebook.
3. **Note:** If Phonebook is not displayed, press **More** to display additional Superkey features.
4. Press **Options** to display Name, Tel (telephone number), Dep (department), or Loc (location).
5. Move between the information fields by pressing **Next Field**.
6. Enter the appropriate information in these fields using the dialing key pad.

Note: Rather than pressing **Options**, you can simply enter a last name to search on.

7. Press **Lookup**.
The number associated with the entered name is displayed.
8. If the name is not unique, press **Next**.
9. Do one of the following:
 - To make the call, press **Call**.
 - To exit, press **Superkey**.

Queue Status

To determine Queue Status:

1. Press **Superkey**.
2. Press Queue Status.
Note: If Queue Status is not displayed, press **More** to display additional Superkey features.
3. Enter the Group number using the dialing keypad.
4. Press **Display Info**.
5. Press **Superkey** to exit.

Reminder

You can use the Reminder feature to program your 5235 IP Phone to ring and provide a message a specified time within a 24-hour period.

To use Reminder:

1. Press **Superkey**.
2. Press **Reminder**.

Note: If Reminder is not displayed, press **More** to display additional Superkey features.

3. Use the dialpad keys to enter the hour and minute for your reminder
4. Press **Save**.





Ring Adjust

You can use the Ring Adjust feature, accessed through the Superkey, to adjust the pitch and volume of your 5235 IP Phone.

To adjust the pitch and volume of your phone:

1. Press the **Superkey**.
2. Press Ring Adjust.

Note: If Ring Adjust is not displayed, press **More** to display additional Superkey features.

3. Adjust the ringer pitch as follows:
 - Press Ringer Pitch
 - Repeatedly press  to decrease pitch or  to increase pitch.
4. Adjust the Ringer Volume as follows:
 - Press Ringer Volume
 - Repeatedly press  to decrease volume or  to increase volume.

Speed Call

Speed Call is an application that allows you to dial a specific number with one key press. You must program Speed Call on either a Softkey or Programmable key. For more information on programming this key, see *Program Speed Call*.

To make a Speed Call:

- Press the key that you have programmed as your Speed Call key.

Tag Call

Tag Call allows you to signal that you are the victim of a threatening or malicious call. Using the tag, your system administrator or Telephone Company can identify the source of the call and provide this information to appropriate personnel or authorities.

CAUTION: Tagging a non-malicious call may result in fines or other penalties.

To tag a malicious call:

1. Press the programmed Tag Call key while the call is in progress. For information on how to program keys, see to *Programming Features On Your Keys* -OR-

2. Press Trans/Conf.

3. Dial the appropriate feature access code.

If the call was successfully tagged, *Thank You* is shown on the display; otherwise, *Not Allowed* is displayed.

Note: Tag Call can be used on active two-party calls only. Calls on hold and conference calls cannot be tagged.

USING THE 5235 IP PHONE WITH 5310 IP CONFERENCE UNIT

The 5235 IP Phone uses the 5310 IP Conference Unit for conferencing. You use the Conference Controller to turn the conference unit off or on, to adjust the volume or to put the conference unit into Presentation mode. You can only run one Conference Controller session at a time. If the 5310 Conference Unit is not connected to the 5235, the Conference Controller application is not available.

Access the Conference Controller

To access the Conference Controller:

1. Open the *Application* shutter and press the Conference Controller label, or
2. Open the *Phone* shutter and press the key programmed to the Conference Controller application.

Turn the conference unit on and off

1. Verify that the conference unit is connected to the 5235 IP Phone.
2. Access the Conference Controller. For more information, see *Access Conference Controller*.
3. Press **Turn On/Turn Off**.

Note: Use the same Touch Screen button to turn your conference unit on and off. The button presents the appropriate option depending on the state of your conference unit (Turn Off when the unit has already been turned on, and vice versa).

Adjust the conference unit volume

- Press Volume Up or Volume Down.

Place the conference unit in Presentation mode

Presentation Mode is used when only one individual is speaking to a group. If another member in the group wishes to speak, you must disable Presentation Mode. Presentation Mode minimizes extraneous noise.

To place the conference unit in Presentation mode

- Press Presentation Mode.

Exit the conference controller

To exit the conference controller

- Press Close.

Mute the conference unit

To mute the conference unit so that conversation in the meeting room cannot be heard by individuals being conferenced:

- Press Mute.

MESSAGING


Set up your mailbox

Before you can use voice mail, you must first set up your mailbox.

To set up your mailbox:

1. Dial the Hunt Group number provided to you by your system administrator.
2. Follow the verbal instructions to create your personal passcode and to record your name and greeting.

Set up forwarding for your Voice Mail

1. Open the *Settings* shutter.
2. Press the scroll buttons () until the **Call Forwarding** setting is listed.
3. Press the Call Forwarding label.
4. Press **New**.
5. Press **Profile Name**. An on-screen keyboard displays.
6. In the on-screen keyboard, enter "Voice Mail" and press **Save**.
7. In all the fields, put in the hunt group number provided by your System Administrator.
8. Press **Activate**.

Log into your mailbox from your own extension

Note: You can only login to your mailbox from one application at the same time. For example, if you have logged in to your mailbox from the TUI, 5140/5240 VVM or 5230 VVM, an error message is displayed when you try to login to your mailbox from the Messages shutter.

To login to your mailbox from your extension:

1. Open the *Messages* shutter.

Note: The mailbox number assigned to the prime extension of this phone is displayed. From this window, only the mailbox assigned to this extension can be logged into. If this is not your mailbox number, see *Log into your mailbox from another extension*. If there is no mailbox associated with the phones primary DN, the mailbox status is displayed as *No Mailbox*. In this case, see *Log into your mailbox from another extension*.

2. Press the Please enter your passcode field.
3. In the on-screen keyboard, enter your passcode.
4. Press OK.
5. If you wish to have the system remember this passcode, press the Remember my passcode check box.
6. Press Login.

Log into your mailbox from another extension

Note: You can only login to your mailbox from one application at a time. For example, if you have logged in to your mailbox from the TUI, 5140/5240 VVM or 5230 VVM, an error message is displayed when you try to login to your mailbox from the Messages shutter.

To login to your mailbox from another extension:

1. Open the *Messages* shutter.
2. Press **Connect as Guest**.
3. Press the **Mailbox account number** field.
4. In the on-screen keyboard, enter your mailbox account number
5. Press the **Please enter your passcode** field
6. In the on-screen keyboard, enter your passcode.
7. Press **Login**.

Note: If you wish to return to the owner login window, press **Back to Owner** at any time.

Log out of your mailbox

To logout of your mailbox:

- Press **Logout**. This closes the *Messages* shutter.

Note: After five minutes of inactivity, you are automatically logged out of your mailbox and the Messages shutter closes. When you close the *Messages* shutter, you are **not** automatically logged out of your mailbox.

Display message details

To display details about a message:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list. The window can display the following information about your message:
 - Message type: new, saved, confidential, urgent or recorded
 - Date, time and duration of messageIn this window, you can save, play or delete the message. You can send the voicemail to your email if the Forward to Email feature is enabled. You can dial the message sender or add the message sender to your contact list in the *People* shutter.
4. To view other messages and their details, use the scroll buttons (insert) to move up or down through your message list.

Play a voice message

To play a voice message:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press the play button ▶.

Control the play of the message via the following command buttons:

- stop ■
- pause ||
- go to the beginning of the message ◀◀
- go to the end of the message ▶▶
- rewind the message by five seconds ◀◀
- fast forward the message by five seconds ▶▶ .

Note: The audio connection is terminated after 30 seconds of idle time.

Dial message sender

To dial the phone number of a message sender:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press **Dial**.

If there is no known number, the Dial button is disabled. If the number is internal, the call is dialed immediately. If the number is not internal, dialing preferences, specified in the *Settings* shutter, are applied.

Save a message

To save a message:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press **Save**.

The saved message is removed from the new list and added to the saved list.

Delete a message

To delete a message:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press **Delete**.

The next message in the message list is displayed. If the last message in the list was deleted, the Message Details window is closed.

Add a message sender to contact list

To add a sender to your contact list:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press **Copy to Contacts**.

The contact is added to your contact list. If the contact already exists in your contact list, it is not added.

Forward a message to your email address

You can only forward a message to your email address if the Forward to Email feature is enabled for your system. If the To Email button is displayed but not enabled, this means this feature has been purchased but is not enabled.

To forward a message to your email address:

1. Open the *Messages* shutter.
2. Login to your mailbox.
3. Press on a message in your message list.
4. Press **To Email**.

The message is forwarded to your email address. If you have set your preference, in the desktop user tool, to delete messages when forwarding, the message is removed and the next message in the list is displayed. If there are no more messages, the Message Detail window is closed.


USING THE 5235 IP PHONE WEB BROWSER

To start the Web Browser:

1. Open the *Applications* shutter.
2. Press the **Web Browser** setting.

Note: You can also program the Web Browser to open via a programmed key. For more information, see *Program a 5235 IP Phone application*.

To perform a search using the Google search engine:

1. Press the search icon ().
2. In the on-screen keyboard, press the appropriate letters to enter a topic of interest. For more information, refer to *Using the On-Screen Keyboard*.
3. Press **OK**.







To enter the URL or web page address:

1. Press the url field.
2. In the on-screen keyboard, press the appropriate letters to enter a topic of interest. For more information, refer to *Using the On-Screen Keyboard*.
3. Press **OK**.

To enter information in any field in the Web Browser:

1. Press the field that requires information to be entered.
2. In the on-screen keyboard, press the appropriate letters to enter a topic of interest. For more information, refer to *Using the On-Screen Keyboard*.
3. Press **OK**.

To navigate within the Web Browser:

1. To leave the browser open but hidden, press .
2. To move forward through web pages, press .
3. To move back through web pages, press .
4. To update the page information, press .
5. To go to the home page, press .
6. To stop the page loading, press .
7. To navigate within a web page, scroll up and down or side to side using the horizontal or vertical onscreen scroll bars on the bottom and right side of the screen.

USING THE LINE INTERFACE MODULE

The 5235 IP Phone supports the Mitel Line Interface Module. The Line Interface Module allows you to make and receive calls over an analog line (Line Interface Module line) connected to your phone. The Line Interface Module operates in either of the following two modes, as determined by your System Administrator:

- **Line Interface Module Mode:** your phone allows you to use the Line Interface Module line at any time
- **Failover Mode:** you can use the Line Interface Module line only when the IP connection has failed

Note: Handsfree and on-hook dialing are not supported on the Line Interface Module line.

For information on emergency number dialing using the Line Interface Module, refer to Emergency Calls.

Making and Answering Calls Using the Analog key

To make a call using the Analog line:


1. Lift the handset.
2. Press the key you programmed as Line Interface Module.
ANALOG CALL is displayed.
3. Dial the number.

Note: When you make an external call over the analog line, a prefix dialing number is not required. If your phone's Line Interface Module key has the Privacy option enabled, you cannot access the analog line when another phone is using the analog line (key is solid orange). To access the analog line, the user of the other phone must first hang up. To determine whether the Privacy option is enabled, contact your System Administrator.


To answer a Call using the analog line:

1. Lift the handset.
2. Press the Line Interface Module key that is highlighted.

To answer a waiting call on the analog line:

Note: If you have subscribed to an analog call waiting service, you may use the hookswitch or press Cancel () to answer a waiting analog call. When you are on an analog call and a waiting analog call arrives, you hear a beep. This feature may not be supported in all regions.

To answer a waiting analog call or return to the original analog call:

1. Do one of the following:
 - Press and release the hookswitch
 - Press Cancel ()
2. Press the key you have programmed as Line Interface Module.

To put a current call on hold to answer an incoming analog call:

- Press the highlighted Line Interface Module key.

To switch between the current call and the held call when one of the calls is using the analog line, do one of the following:

- If your current call is using the analog line, press the flashing Line key of the held call. The analog call is automatically put on hold.
- If your current call is using an IP line, press the highlighted Line Interface Module key. The IP line is automatically put on hold.

To end a current call when an incoming analog call arrives:

- Press Cancel (⊗) and then press the highlighted Line Interface Module key. The current call ends and you are connected to the caller on the analog line.

To end the current analog call when an incoming call arrives:

- Press Cancel (⊗). The current analog call ends and you are connected to the new caller.

Making and Answering Calls Using the Failover Mode

To make a call using the analog line during an IP connection failure:

1. Lift the handset.
The phone displays *IP FAIL: ANALOG CALL*.
2. Dial the number.

To answer a call using the analog line during an IP connection failure:

- Lift the handset. The call is answered.
The phone displays *IP FAIL: ANALOG CALL*.



™, © Trademark of Mitel Networks Corporation.
© Copyright 2005, Mitel Networks Corporation.
All rights reserved.